

Refer to: Power Roof Opening Panel Initialization .


REMOVAL AND INSTALLATION > ROOF OPENING PANEL MOTOR > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

Place the roof opening panel glass to the fully CLOSE position.

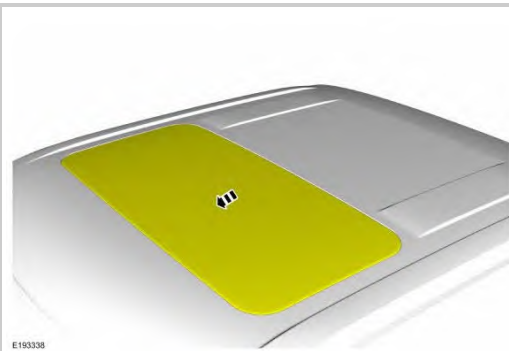

2.

Place the roof opening panel shield to the fully OPEN position.



3.

Lower the headliner. REFER to: Headliner - Lowering - SuperCab .

4.

Remove the roof opening panel motor.

1.

Disconnect the roof opening panel motor electrical connector.

2.