


On both sides, remove the retainers.

Torque

: 9 lb.in (1 Nm)

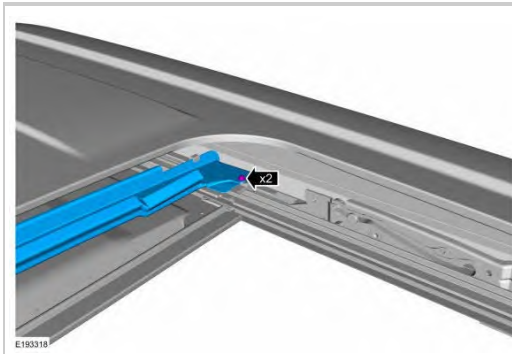


3.



NOTE: Inset is LH side shown in illustration, RH side similar.

On both sides, roll the trough assembly out of the guide clips to remove.

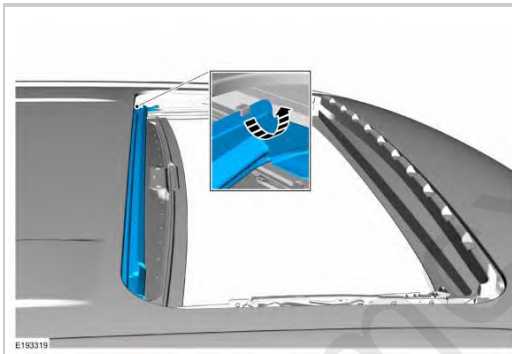

REMOVAL AND INSTALLATION > TROUGH ASSEMBLY > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > ROOF OPENING PANEL SHIELD > REMOVAL

1.

Remove the roof opening panel glass. REFER to: Roof Opening Panel Glass .

2.