


On both sides, remove the retainers.

Torque

: 9 lb.in (1 Nm)

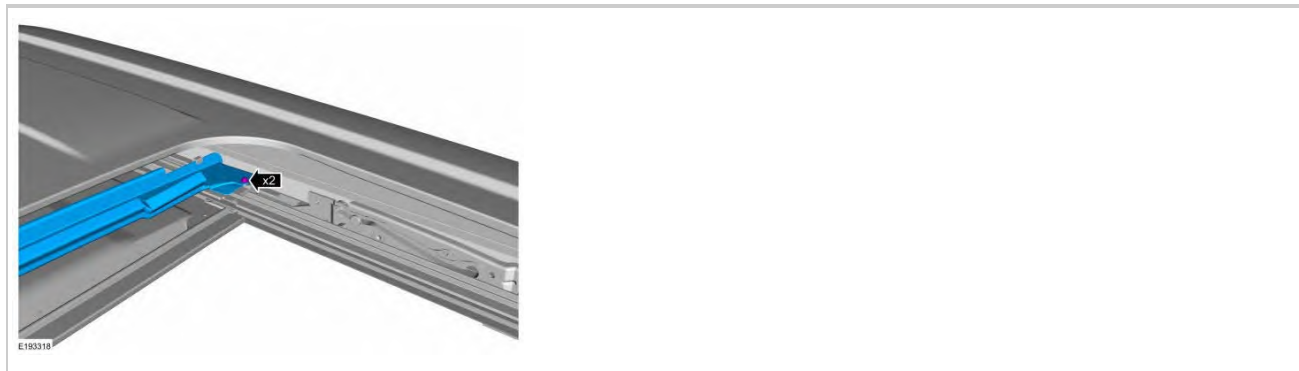

3.



NOTE: Inset is LH side shown in illustration, RH side similar.

On both sides, roll the trough assembly out of the guide clips to remove.



REMOVAL AND INSTALLATION > TROUGH ASSEMBLY > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > ROOF OPENING PANEL SHIELD > REMOVAL

1.

Remove the roof opening panel glass. REFER to: Roof Opening Panel Glass .

2.

Remove the trough assembly. REFER to: Trough Assembly .

3.

Using the switch, place the roof opening panel glass cable mechanisms in the glass open position.

4.

Slide the roof opening panel shield forward halfway.



5.



NOTE: The sub steps should be performed together as a single step.

Disengage the LH front corner of the roof opening panel shield from the guide track.

1.

Pull up on the center of the roof opening panel shield for clearance.

2.



NOTE: The guide foot may remain on the roof opening panel shield or in the guide track. Reassemble as necessary for installation.

Pull the LH front roof opening panel shield guide foot out and up from the guide rail to disengage the roof opening panel shield throughout from the track.