

Remove the bolt from the hood latch release handle.

Torque


: 80 lb.in (9 Nm)

2.

Remove the hood latch release cable from the hood latch release handle retaining bracket.

3.

Remove the hood latch release cable end from the hood latch release handle.

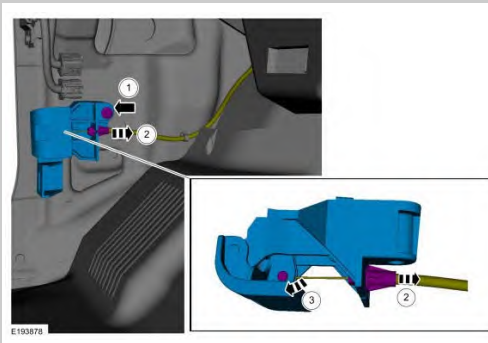

REMOVAL AND INSTALLATION > HOOD LATCH RELEASE HANDLE > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > IGNITION LOCK CYLINDER > REMOVAL

Non-functional lock cylinder



NOTE: For non-functional ignition lock cylinders, replace the steering column.

1.

Remove the steering column. Refer to: Steering Column .

Functional lock cylinder



NOTE: Repair individual lock cylinders by discarding the inoperative lock cylinder and building a new lock cylinder using the appropriate lock repair service kit. The lock repair service kit includes a detailed instruction sheet to build the new lock to match the key cut pattern for the vehicle, thus allowing for single point replacement without needing to replace or reprogram other locks or keys.