



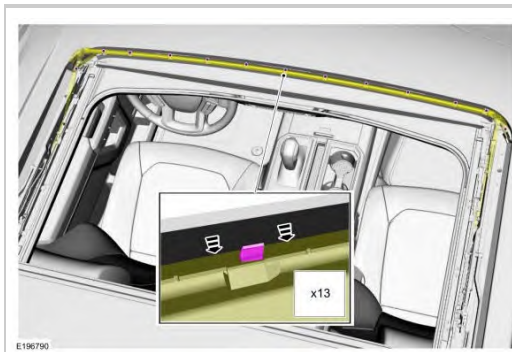

4.

Slide the air deflector arms rearward in the frame rails, roll the arms out of the rails and remove the air deflector.

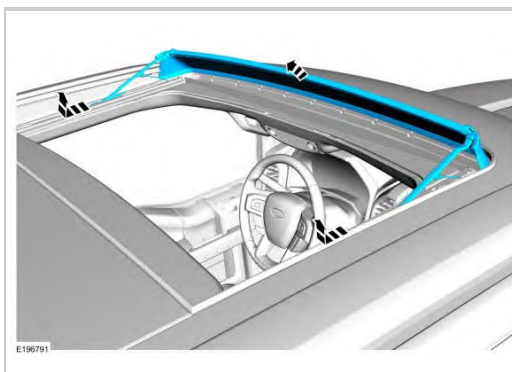

REMOVAL AND INSTALLATION > AIR DEFLECTOR > INSTALLATION

1.

To install, reverse the removal procedure.

2.

Carry out the roof opening panel initialization. REFER to: Power Roof Opening Panel Initialization .

REMOVAL AND INSTALLATION > ROOF OPENING PANEL CONTROL SWITCH > REMOVAL

1.

The roof opening panel switch is replaced as an assembly with the overhead console. REFER to: Overhead Console .

REMOVAL AND INSTALLATION > ROOF OPENING PANEL CONTROL SWITCH >