

INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > ROOF OPENING PANEL FIXED GLASS > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the roof opening panel frame. REFER to: Roof Opening Panel Frame .

2.




NOTE: Position the roof opening panel frame upside down on a suitable workbench.

Remove the roof opening panel fixed glass bolts and with the aid of an assistant, separate the frame from the glass.

Torque

: 35 lb.in (4 Nm)

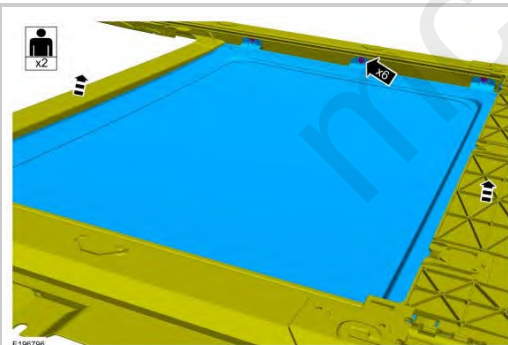

REMOVAL AND INSTALLATION > ROOF OPENING PANEL FIXED GLASS > INSTALLATION

1.

To install, reverse the removal procedure.