



REMOVAL AND INSTALLATION > ROOF OPENING PANEL SHIELD > INSTALLATION

1.



NOTE: Make sure the tension release pin is removed after the roof opening panel shield is installed or damage to the roof opening panel components may occur.


To install, reverse the removal procedure.

2.



NOTE: Make sure the roof opening panel shield plastic guide strip is routed into the side frame rails correctly before the cross bar is connected to the cable mechanisms or damage to the roof opening panel components may occur during power operation of the shield.

When installing the shield, use an assistant to insert the plastic guide strips and seamed edges into the side frame rails evenly on both sides.

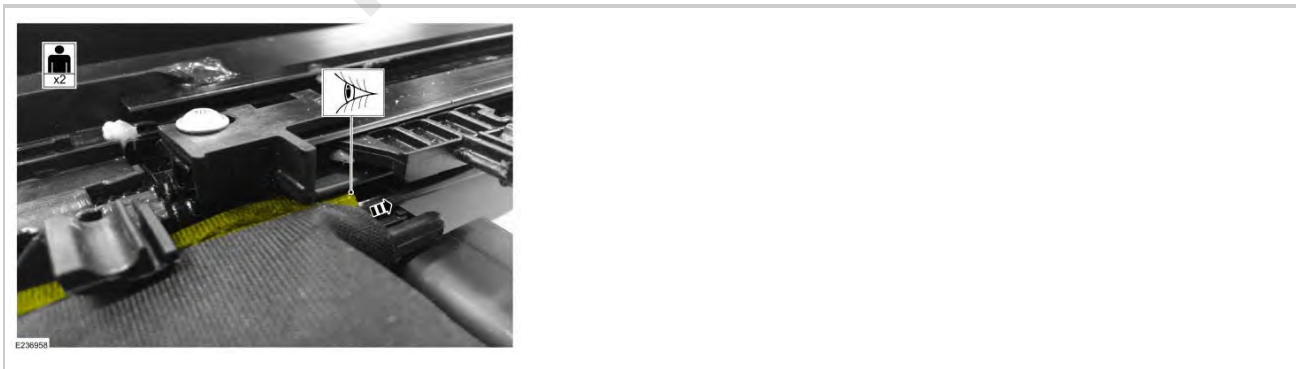

REMOVAL AND INSTALLATION > TROUGH ASSEMBLY > REMOVAL