

Positive Lead	Measurement / Action	Negative Lead
C701-3	Ω	C535-5

Is the resistance less than 3 ohms?

Yes	INSTALL a new master window control switch. REFER to: Front Door Window Control Switch - Vehicles With: Front Power Windows .
------------	---

No	REPAIR the circuit.
-----------	---------------------

DIAGNOSIS AND TESTING > GLASS, FRAMES AND MECHANISMS > PINPOINT TEST(S) > PINPOINT TEST I : THE POWER SLIDING REAR WINDOW IS INOPERATIVE/DOES NOT OPERATE CORRECTLY

Refer to Power Windows for schematic and connector information.

Normal Operation and Fault Conditions

REFER to: Glass, Frames and Mechanisms - System Operation and Component Description .

Possible Causes

- Fuse
- Relay
- Wiring, terminals or connectors
- Power sliding rear window switch
- Power sliding rear window motor

Visual Inspection and Diagnostic Pre-checks

- Verify BJB fuse 74 (30A) is OK.

DIAGNOSIS AND TESTING > GLASS, FRAMES AND MECHANISMS > PINPOINT TEST(S) > PINPOINT TEST I : THE POWER SLIDING REAR WINDOW IS INOPERATIVE/DOES NOT OPERATE CORRECTLY > PINPOINT TEST I : THE POWER SLIDING REAR WINDOW IS INOPERATIVE/DOES NOT OPERATE CORRECTLY

I1 CHECK THE VOLTAGE SUPPLY CIRCUIT TO THE POWER SLIDING REAR WINDOW RELAYS FOR AN OPEN

Ignition OFF.

Disconnect: Power Sliding Rear Window Open Relay.