

Remove the inner belt moulding.



4.

Remove the front door glass top run.



REMOVAL AND INSTALLATION > FRONT DOOR GLASS TOP RUN > INSTALLATION

All vehicles

1.

To install, reverse the removal procedure.

Vehicles with power windows

2.

Carry out the power door window initialization. Refer to: Power Door Window Initialization .

REMOVAL AND INSTALLATION > FRONT DOOR WINDOW CONTROL SWITCH - VEHICLES WITH: FRONT POWER WINDOWS > REMOVAL

Both doors

1.

Remove the front door trim panel. Refer to: Front Door Trim Panel .