



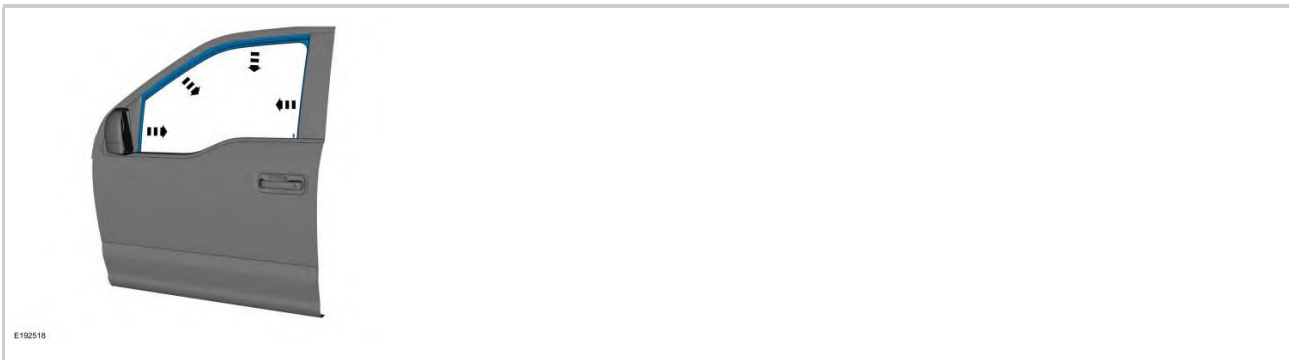

5.

Remove the front door glass.

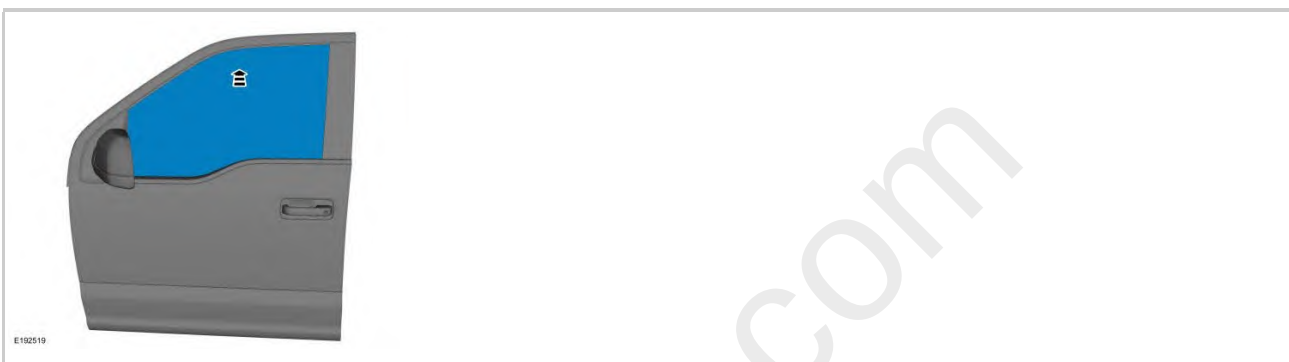

REMOVAL AND INSTALLATION > FRONT DOOR WINDOW GLASS > INSTALLATION

All vehicles

1.

To install, reverse the removal procedure.

Vehicles with power windows

2.

Carry out the power door window initialization. Refer to: Power Door Window Initialization .

REMOVAL AND INSTALLATION > FRONT DOOR WINDOW REGULATOR - VEHICLES WITH: FRONT MANUAL WINDOWS > REMOVAL



NOTE: LH side shown, RH side similar.



NOTE: Removal steps in this procedure may contain installation details.

1.