

REMOVAL AND INSTALLATION > REAR DOOR WINDOW GLASS - SUPERCAB, VEHICLES WITH: REAR POWER WINDOWS > REMOVAL



NOTE: LH side shown, RH side similar.



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the rear door window regulator and motor. Refer to: Rear Door Window Regulator and Motor - SuperCab, Vehicles With: Rear Power Windows .

2.

Remove the rear door upper moulding. Refer to: Rear Door Upper Moulding .

3.

Remove the aft rear door glass run and bracket.


Torque

: 93 lb.in (10.5 Nm)



4.

Lower the rear door window glass.

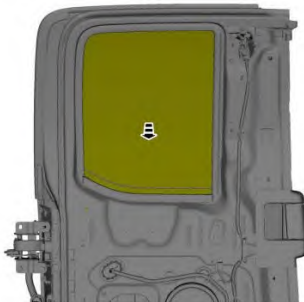

5.