


installation.

Press the cable nuts and springs as shown to allow slack in the rear sliding window motor cables.

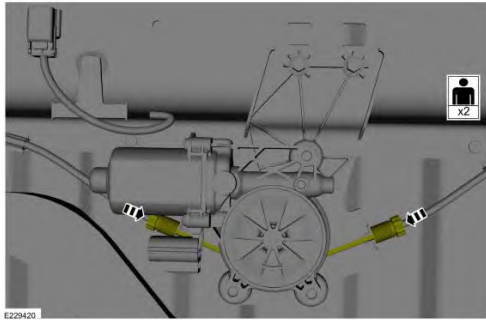

REMOVAL AND INSTALLATION > REAR WINDOW GLASS SLIDING PANEL

Special Tool(s) / General Equipment

Long Nose Pliers


REMOVAL AND INSTALLATION > REAR WINDOW GLASS SLIDING PANEL > REMOVAL

1.

Position the rear window glass sliding panel as shown. Refer to: Loadspace Trim Panel - SuperCab/SuperCrew .

2.

Position the rear window glass sliding panel as shown below.

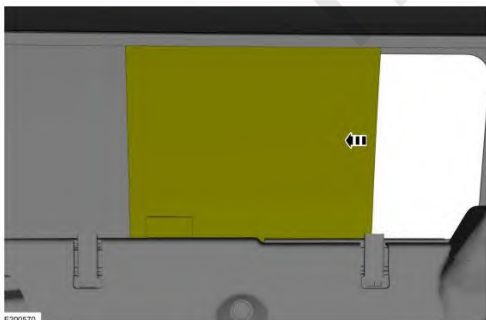

3.

Remove the rear window glass sliding panel left stop screw.