

1.

To install, reverse the removal procedure.

2.

Using a diagnostic scan tool, complete the PMI process for the ABS module following the on-screen instructions.

Carry out the IVD initialization using the scan tool and following the diagnostic scan tool on-screen instructions.

3.

Bleed the brake system. Refer to: BRAKE SYSTEM PRESSURE BLEEDING .

REMOVAL AND INSTALLATION > REAR WHEEL SPEED SENSOR > REMOVAL




NOTE: Removal steps in this procedure may contain installation details.

Right hand (RH) wheel speed sensor

1.

Detach the harness isolators from the brake hose brackets and detach the 5 harness retainers from the axle.

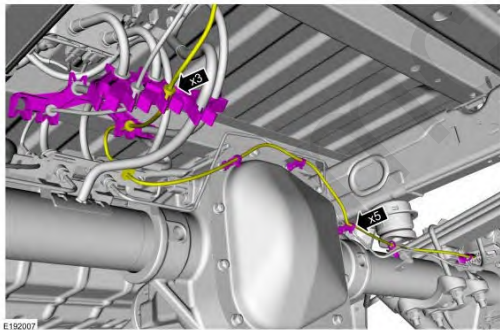

Left hand (LH) wheel speed sensor

2.

Detach the harness isolators from the brake hose brackets and detach the harness retainer from the axle.