

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > WHEEL SPEED SENSOR RING

Special Tool(s) / General Equipment

Hydraulic Press
Punch
Wooden Block


REMOVAL AND INSTALLATION > WHEEL SPEED SENSOR RING > REMOVAL

1.

Remove the axle shaft. Vehicles With: Ford 8.8 Inch Ring Gear, Refer to: Axle Shaft . Vehicles With: Ford 9.75 Inch Ring Gear, Refer to: Axle Shaft .

2.

Using a suitable driver, remove the wheel speed sensor ring. Use the General Equipment: Punch

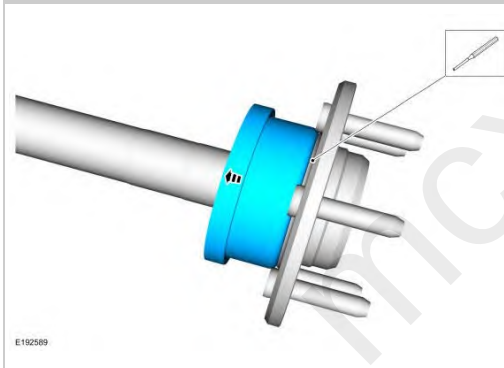

REMOVAL AND INSTALLATION > WHEEL SPEED SENSOR RING > INSTALLATION

1.

Using a hydraulic press and wooden blocks, install the wheel speed sensor ring. Use the General Equipment: Hydraulic Press Use the General Equipment: Wooden Block