

Service Manual: FRONT DISC BRAKE

DIAGNOSIS AND TESTING > FRONT DISC BRAKE

REFER to: Brake System .

REMOVAL AND INSTALLATION > BRAKE CALIPER > REMOVAL*NOTE: Make sure that all openings are sealed.**NOTE: If the fluid is spilled on the paintwork, the affected area must be immediately washed down with cold water.*

1.


Remove the wheel and tire. Refer to: Wheel and Tire .

2.

Remove the bolt and disconnect the brake hose. Discard the washers.

Torque

: 26 lb.ft (35 Nm)

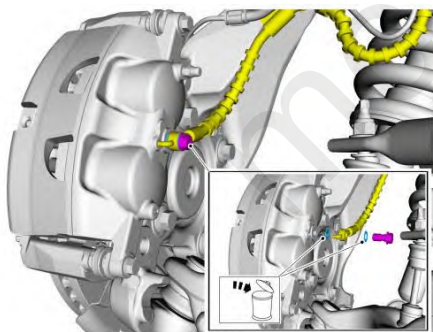

3.

Remove the 2 bolts and the brake caliper.

Torque

: 27 lb.ft (36 Nm)