


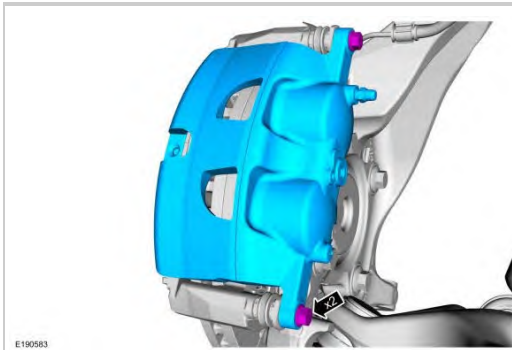

REMOVAL AND INSTALLATION > BRAKE CALIPER > INSTALLATION

1.

To install, reverse the removal procedure.

2.

Bleed the brake system. Refer to BRAKE SYSTEM PRESSURE BLEEDING .

REMOVAL AND INSTALLATION > BRAKE CALIPER ANCHOR PLATE > REMOVAL

1.


Remove the brake pads. Refer to: Brake Pads .

2.

Remove the 2 bolts and the anchor plate. Discard the bolts

Torque

: 184 lb.ft (250 Nm)

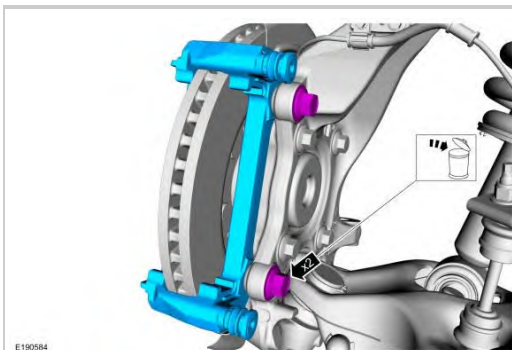

REMOVAL AND INSTALLATION > BRAKE CALIPER ANCHOR PLATE > INSTALLATION