

To install, reverse the removal procedure.

Materials

REMOVAL AND INSTALLATION > BRAKE DISC > REMOVAL

Remove the wheel and tire. Refer to: Wheel and Tire .

 **NOTE:** Do not pry in the caliper sight hole to retract the pistons as this can damage the pistons and boots.

 **NOTE:** Do not allow the brake caliper and anchor plate assembly to hang from the brake hose or damage to the hose can occur.

Remove the 2 anchor plate bolts and position the brake caliper and anchor plate assembly aside. Discard the bolts.

Torque

: 184 lb.ft (250 Nm)

