

1.


Remove the brake disc. Refer to: Brake Disc .

2.

Remove the 3 bolts and the brake disc shield.

Torque

: 155 lb.in (17.5 Nm)

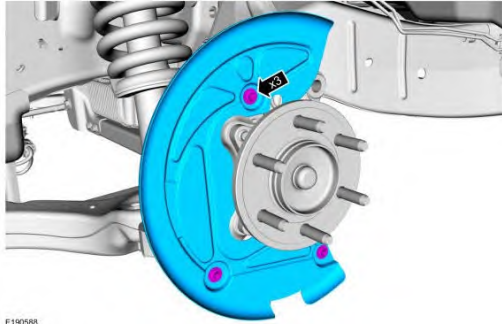

REMOVAL AND INSTALLATION > BRAKE DISC SHIELD > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > BRAKE PADS > REMOVAL

1.

Remove the wheel and tire. Refer to: Wheel and Tire .

2.



NOTE: Do not pry in the caliper sight hole to retract the pistons as this can damage the pistons and boots.



NOTE: Do not allow the brake caliper to hang from the brake hose or damage to the hose can occur.

Remove the 2 bolts and position the brake caliper aside.

Torque