

1.


Remove the brake disc. Refer to: Brake Disc .

2.

Remove the 3 bolts and the brake disc shield.

Torque

: 155 lb.in (17.5 Nm)

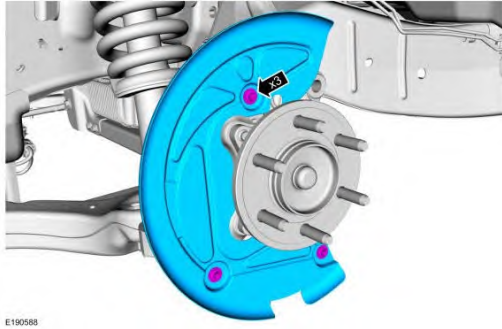

REMOVAL AND INSTALLATION > BRAKE DISC SHIELD > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > BRAKE PADS > REMOVAL

1.

Remove the wheel and tire. Refer to: Wheel and Tire .

2.



NOTE: Do not pry in the caliper sight hole to retract the pistons as this can damage the pistons and boots.




NOTE: Do not allow the brake caliper to hang from the brake hose or damage to the hose can occur.

Remove the 2 bolts and position the brake caliper aside.

Torque


: 27 lb.ft (37 Nm)

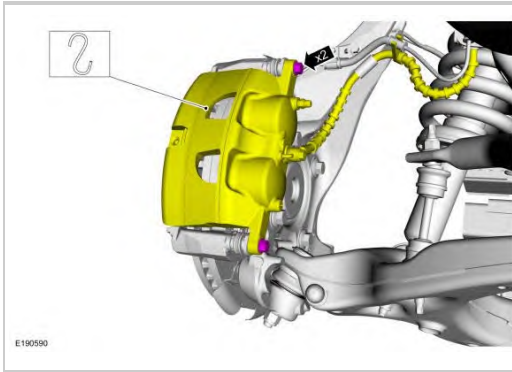

3.


 **NOTE:** Make sure the brake pads are installed in the correct position. The inboard brake pad steel backings have rounder/raised edges and the larger chamfered portion of the inboard linings must always be installed at the top. The inner brake pads are not interchangeable from right-to-left. The outboard brake pads can be installed on either side of the vehicle. Failure to install the brake pads in the correct position may result in damage to the brake components.

Remove the brake pads.

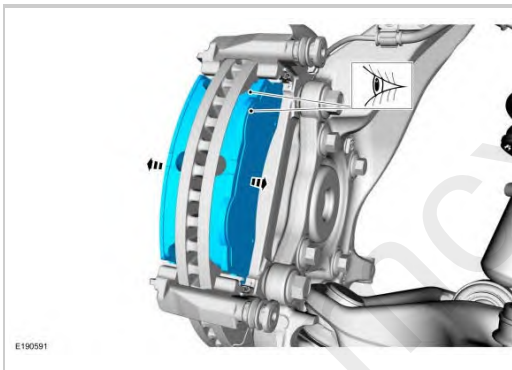

4.

Remove the 4 brake pad clips.

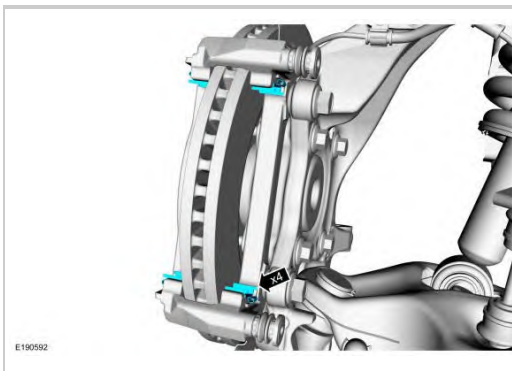

5.