

Adjustable pedals are inoperative or do not operate correctly - using the RKE transmitter	Refer to the Pinpoint Test	GO to Pinpoint Test C
Adjustable pedals only move for 1 second regardless of how long the adjustable pedal control switch is pressed	Diagnostic Trouble Codes (DTCs) present in the DSM	RETRIEVE and DIAGNOSE all DSM Diagnostic Trouble Codes (DTCs)

DIAGNOSIS AND TESTING > HYDRAULIC BRAKE ACTUATION > PINPOINT TESTS > PINPOINT TEST A : ADJUSTABLE PEDALS ARE INOPERATIVE OR DO NOT OPERATE CORRECTLY - WITHOUT MEMORY FEATURE

Refer to ADJUSTABLE PEDAL for schematic and connector information.

Normal Operation and Fault Conditions

The adjustable pedal control switch receives fused battery voltage from BCM fuse 31 (15A). When the switch is pressed, the voltage flows through the adjustable pedal motor and then back through the switch to ground. The motor continues to operate as long as the switch is pressed until the motor reaches the end of travel. An open fuse or circuit, a short to ground in the circuit, an open in the adjustable pedal motor, foreign material blocking the pedal assembly, a damaged cable or damaged pedal assembly prevents the adjustable pedals from operating correctly.

Possible Causes

- Foreign material
- Fuses
- Wiring, terminals or connectors
- Adjustable pedal cable
- Adjustable pedal control switch
- Adjustable pedal motor
- Adjustable brake pedal assembly
- Adjustable accelerator pedal assembly

Visual Inspection and Diagnostic Pre-checks

- Make sure BCM fuse 31 (15A) is OK.

DIAGNOSIS AND TESTING > HYDRAULIC BRAKE ACTUATION > PINPOINT TESTS > PINPOINT TEST A : ADJUSTABLE PEDALS ARE INOPERATIVE OR DO NOT OPERATE CORRECTLY - WITHOUT MEMORY FEATURE > PINPOINT TEST A : ADJUSTABLE PEDALS ARE INOPERATIVE OR DO NOT OPERATE CORRECTLY -