



NOTE: This step is only necessary if the LH brake flexible hose was disconnected.

Bleed the brake system. Refer to: Brake System Pressure Bleeding .


REMOVAL AND INSTALLATION > PARKING BRAKE MODULE > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

Disconnect the EPB module electrical connector.

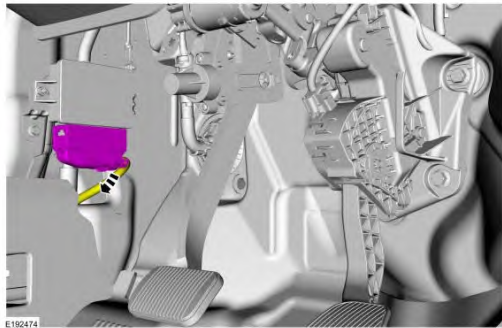


2.

Remove the 2 nuts and the EPB module.

Torque

: 102 lb.in (11.5 Nm)

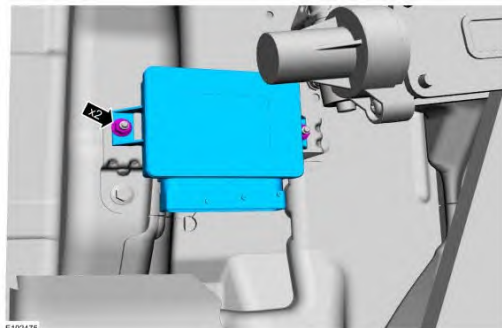

REMOVAL AND INSTALLATION > PARKING BRAKE MODULE > INSTALLATION

1.