


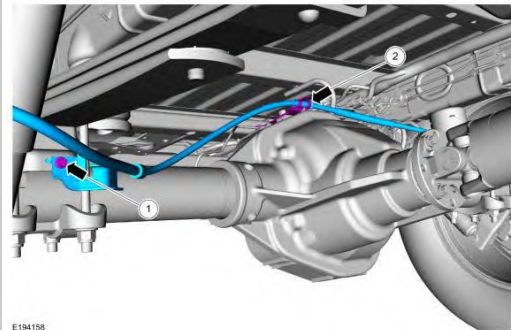

REMOVAL AND INSTALLATION > PARKING BRAKE CABLE RH > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > PARKING BRAKE CONTROL > REMOVAL

1.

Release the parking brake cable tension. Refer to Parking Brake Cable Tension Release .


2.

 **NOTE:** The brake pedal and bracket assembly and the accelerator pedal must be removed to prevent damage when positioning the carpet and foam support aside

Remove the brake pedal and bracket assembly and the accelerator pedal. Refer to Brake Pedal and Bracket . Refer to Accelerator Pedal .

3.

Disconnect the front parking brake cable from the cable union.

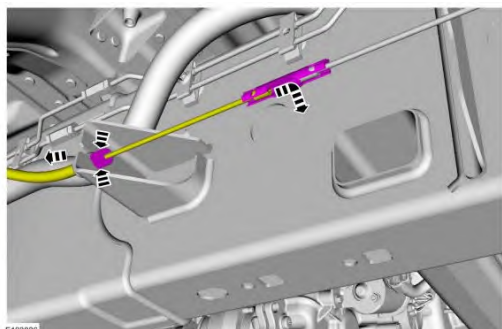

4.