

REMOVAL AND INSTALLATION > REAR BRAKE OUTER FLEXIBLE HOSE > REMOVAL



NOTE: Make sure that all openings are sealed.



NOTE: If the fluid is spilled on the paintwork, the affected area must be immediately washed down with cold water.



NOTE: Removal steps in this procedure may contain installation details.

Right hand (RH) and left hand (LH) outer brake hoses

1.


Remove the wheel and tire. Refer to: Wheel and Tire .

2.

Remove the bolt and disconnect the brake hose. Discard the washers.

Torque

: 26 lb.ft (35 Nm)

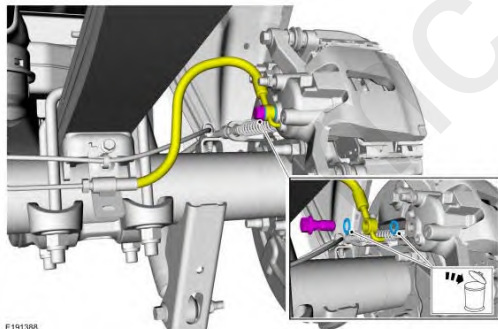

3.

1.

If equipped with EPB, detach the EPB wiring retainer and unclip the brake hose.

2.


Detach the wheel speed sensor wiring retainer.

3.

Remove the outer brake hose bracket bolt.

Torque

: 22 lb.ft (30 Nm)

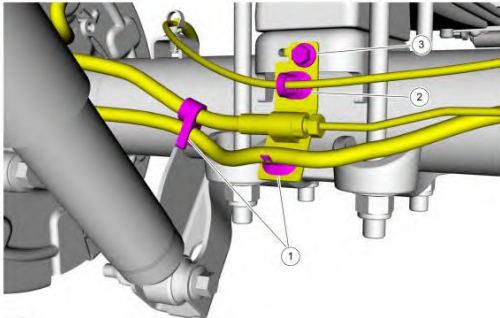


Right hand (RH) outer brake hose

4.

Detach the brake tube from the 2 axle clips, disconnect the brake tube fitting and remove the RH rear outer brake flexible hose/tube assembly.

Torque

: 159 lb.in (18 Nm)

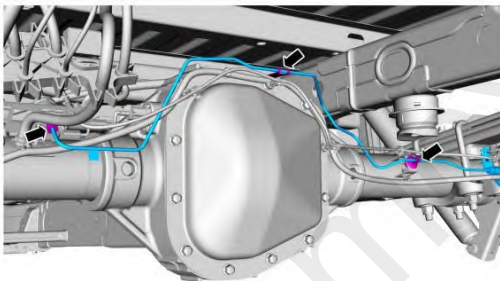

Left hand (LH) outer brake hose

5.

Disconnect the brake tube fitting and remove the LH rear outer brake flexible hose/tube assembly.

Torque

: 159 lb.in (18 Nm)