

Name	Specification
Premium Long-Life Grease XG-1-E1	ESA-M1C75-B

DISASSEMBLY AND ASSEMBLY > DRIVESHAFT UNIVERSAL JOINT > DISASSEMBLY

 **NOTE:** Do not, under any circumstance, clamp the driveshaft assembly in the jaws of a vise or similar holding fixture. Denting or localized fracturing may result, causing driveshaft failure during vehicle operation.

 **NOTE:** This procedure is intended to be used for all U-joints with snap ring retainers.

1.


Remove the driveshaft. REFER to: Rear Driveshaft .

2.

 **NOTE:** If the components are not marked and therefore installed incorrectly, driveshaft imbalance can occur.

 **NOTE:** Center bearing U-joint shown in illustration, others similar.

Index-mark the driveshaft for reassembly.

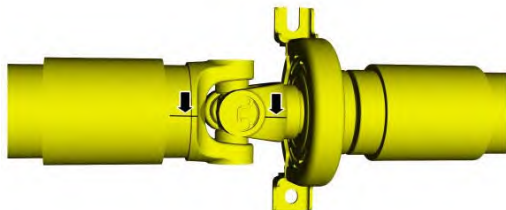

E190125

3.

 **NOTE:** Center bearing U-joint shown in illustration, others similar.

Remove and discard the 4 snap rings.



4.

 **NOTE:** Center bearing U-joint shown in illustration, others similar.

Using the special tool, press the U-joint bearing cups out of the driveshaft yoke and remove the driveshaft yoke.


Use Special Service Tool: 205-086 (T74P-4635-C) Installer/Remover, C-Frame and Screw.



5.

Using the special tool, press the U-joint bearing cups out of the driveshaft yoke and remove the U-joint.

Use Special Service Tool: 205-086 (T74P-4635-C) Installer/Remover, C-Frame and Screw.

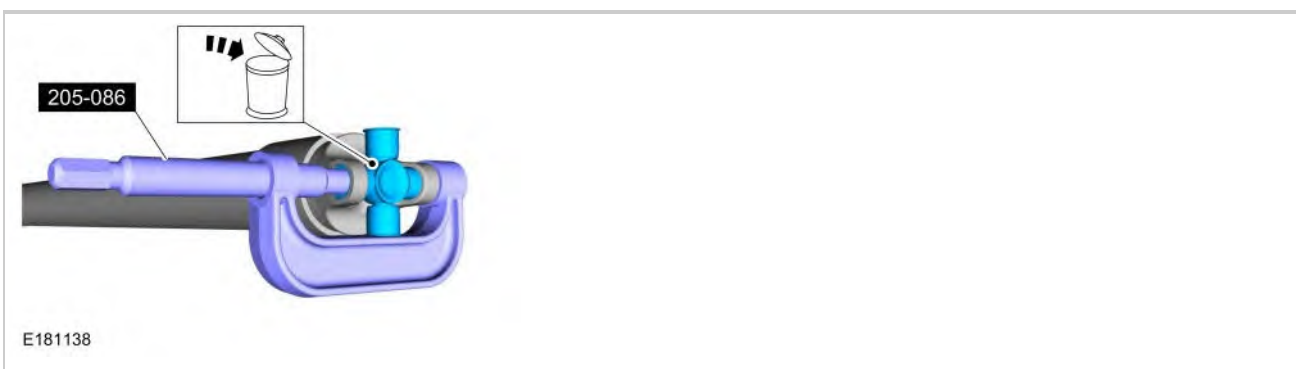

6.