

 E239626	205-371 (T96T-5638-E) Remover, Front Axle Mounting Bushing Cup TKIT-1996-F/FM TKIT-1996-FLM2 TKIT-1998-LM (NavigatorR)
 E239627	205-374 (T96T-5638-H) Installer, Front Axle Mounting Bushing Drawbolt TKIT-1996-F/FM TKIT-1996-FLM2 TKIT-1998-LM (NavigatorR)
 E239628	205-376 (T96T-5638-K) Remover, Front Axle Mounting Bushing TKIT-1996-F/FM TKIT-1996-FLM2 TKIT-1998-LM (NavigatorR)
 E239653	205-527 Remover/Installer, Front Differential Housing Bushing TKIT-2002D-FLM

REMOVAL AND INSTALLATION > AXLE CARRIER BUSHING > REMOVAL




NOTE: Only worn or damaged bushings need to be replaced.

1.

Remove the axle assembly. REFER to: Axle Assembly .

2.

Measure and record the width of the gap between the bushing front lip and the housing.

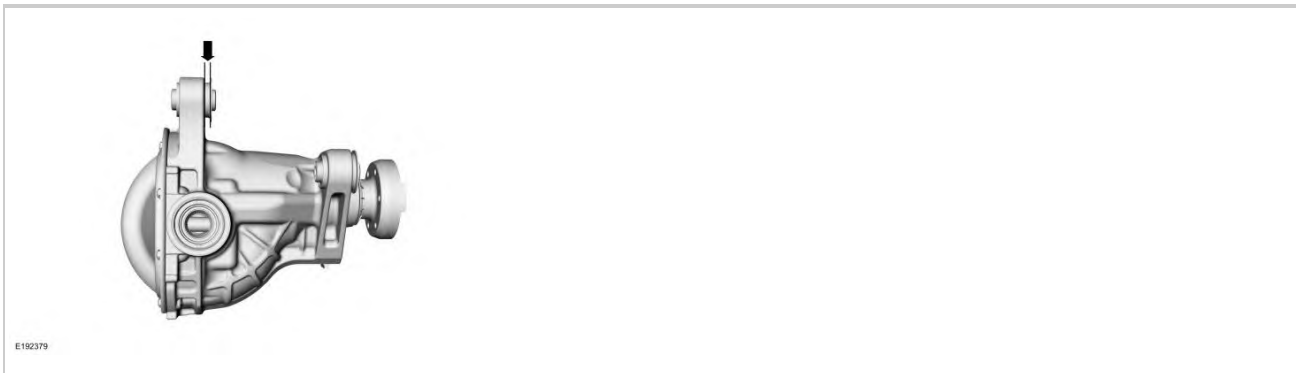

3.

Using the special tools, remove the axle tube bushing.


Use Special Service Tool: 205-371 (T96T-5638-E) Remover, Front Axle Mounting Bushing Cup, 205-374 (T96T-5638-H) Installer, Front Axle Mounting Bushing Drawbolt, 205-527 Front Differential Housing Bushing.



4.

Using the special tools, remove the rear housing bushing.

Use Special Service Tool: 204-186 (T95T-5638-AH) Remover, Front Differential Housing Bushing, 205-371 (T96T-5638-E) Remover, Front Axle Mounting Bushing Cup, 205-374 (T96T-5638-H) Installer, Front Axle Mounting Bushing Drawbolt, 205-527 Remover/Installer, Front Differential Housing Bushing.

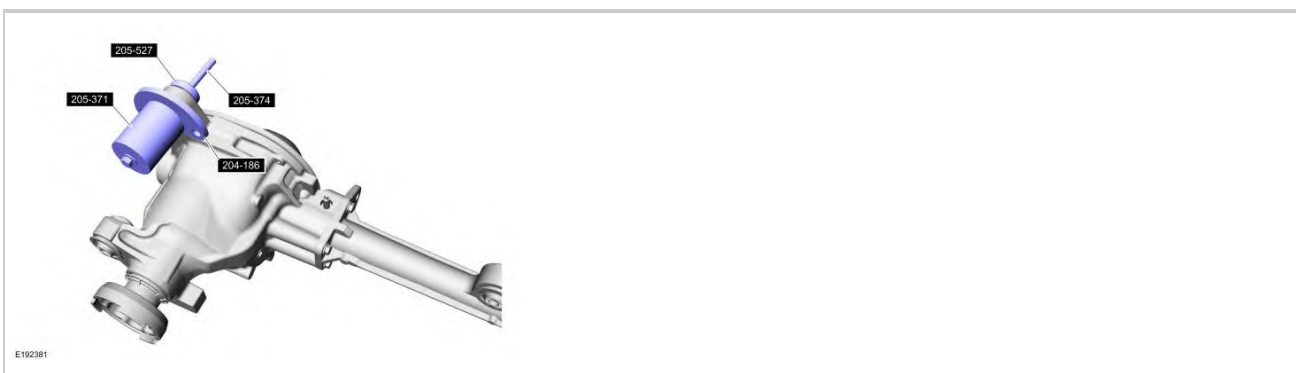

5.