


9.

Apply a new continuous bead of sealant to the differential housing cover as shown in illustration.


Material

: Silicone Gasket and Sealant / TA-30 (WSE-M4G323-A4)

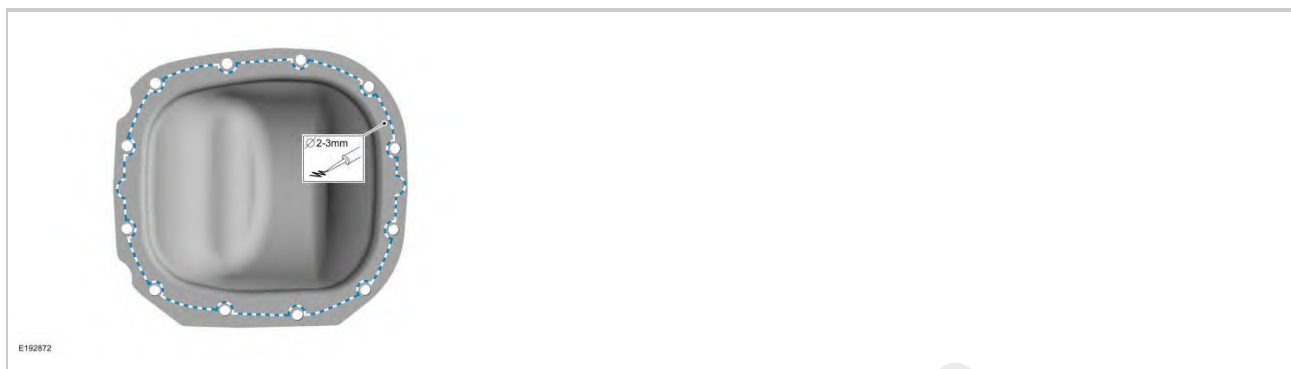

10.

Install the differential cover and differential cover bolts.

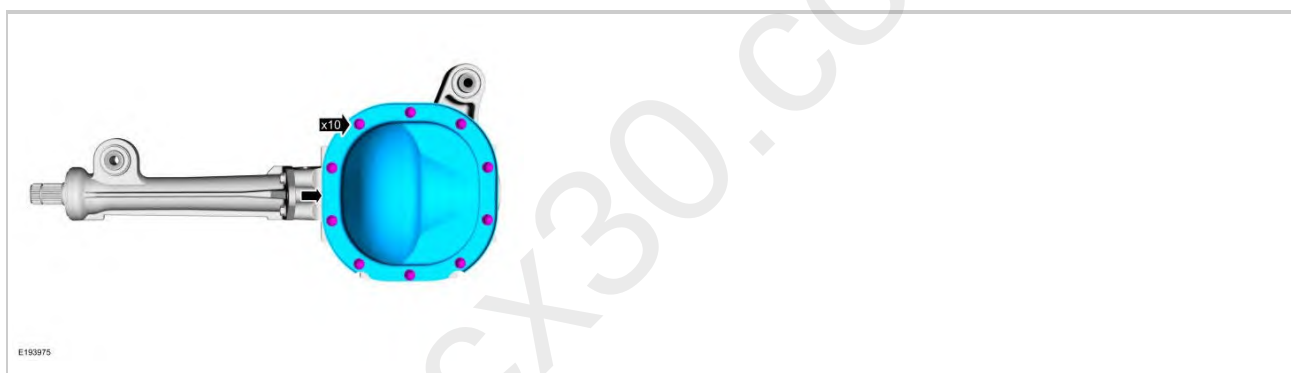


11.

Install the front axle assembly. REFER to: Axle Assembly .

REMOVAL AND INSTALLATION > DIFFERENTIAL RING GEAR AND PINION

Special Tool(s) / General Equipment

 E234280	205-005 (T53T-4621-C) Installer, Drive Pinion Bearing Cone
--	--

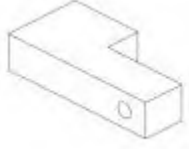 E234283	205-010 (T57L-4221-A2) Installer, Differential Side Bearing
 E234288	205-024 (T67P-4616-A) Installer, Drive Pinion Bearing Cup
 E234297	205-105 (T76P-4020-A3) Adapter for 205-S127
 E234298	205-109 (T76P-4020-A9) Adapter for 205-S127
 E234299	205-110 (T76P-4020-A10) Gauge Block
 E169393	205-111 (T76P-4020-A11) Adapter for 205-S127 Pinion Depth Gauge
 E234302	205-129 (T79P-4020-A18) Disc, Gauge
 E238648	205-460 Protector, Drive Pinion Thread TKIT-1999A-F/LT TKIT-1999A-FM/FLM TKIT-1999A-LM