



6.

1.


Align the index-mark on the driveshaft to the rear axle pinion flange.

2.

Install the new driveshaft-to-pinion flange bolts.

Torque

: 76 lb.ft (103 Nm)

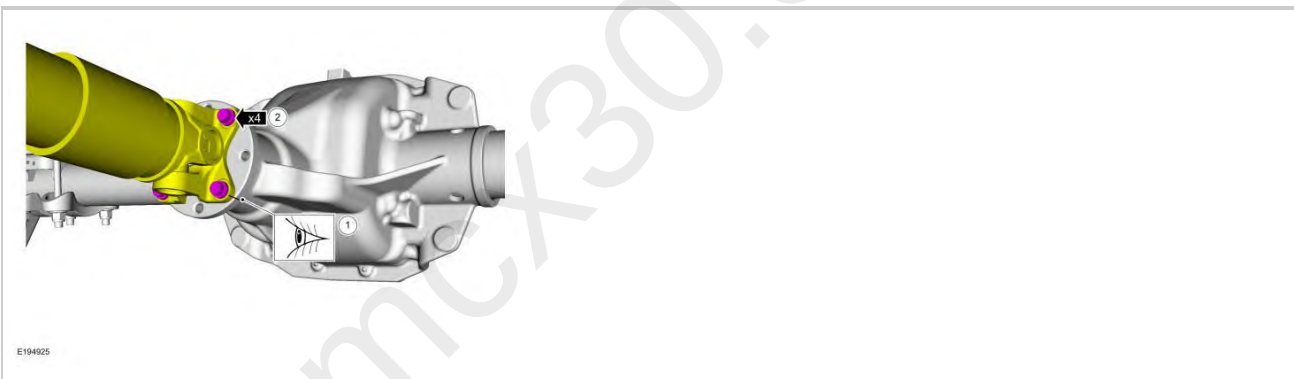

7.

Install the rear brake pads. Refer to: Brake Pads - Vehicles Without: Electronic Parking Brake (EPB) . Refer to: Brake Caliper - Vehicles With: Electronic Parking Brake (EPB) .

REMOVAL AND INSTALLATION > DRIVE PINION FRONT BEARING > REMOVAL AND INSTALLATION



NOTE: The outer differential bearing cup needs to be replaced when replacing the outer differential bearing.

1.