



205-194 (T83T-1225-B) Installer, Axle Bearing
TKIT-1983-FTKIT-1983-FLM TKIT-1983-FX



205-381 (T97T-1177-A) Installer, Rear Axle Oil
Seal TKIT-1997-F/FLM/LT TKIT-1998-LM
(Navigator)

Slide Hammer

Flat-Bladed Screwdriver

Materials

Name	Specification
Motorcraft ® SAE 75W-85 Premium Synthetic Hypoid Gear Lubricant XY-75W85-QL	WSS-M2C942-A

REMOVAL AND INSTALLATION > REAR WHEEL BEARING > REMOVAL

1.

Remove the axle shaft. Refer to: Axle Shaft .

2.



NOTE: If the axle shaft seal is leaking, the axle housing vent may be plugged with foreign material.



NOTE: Use care to avoid damaging the axle shaft seal bore.

Using a flat-bladed screwdriver remove and discard the axle shaft seal. Use the General Equipment: Flat-Bladed Screwdriver