



3.

Using the special tool and a slide hammer, remove and discard the rear wheel bearing. Use Special Service Tool: 205-193 (T83T-1225-A) Remover, Axle Bearing. Use the General Equipment: Slide Hammer




REMOVAL AND INSTALLATION > REAR WHEEL BEARING > INSTALLATION

1.

Lubricate the new rear wheel bearing.

Material

: Motorcraft ® SAE 75W-85 Premium Synthetic Hypoid Gear Lubricant / XY-75W85-QL (WSS-M2C942-A)

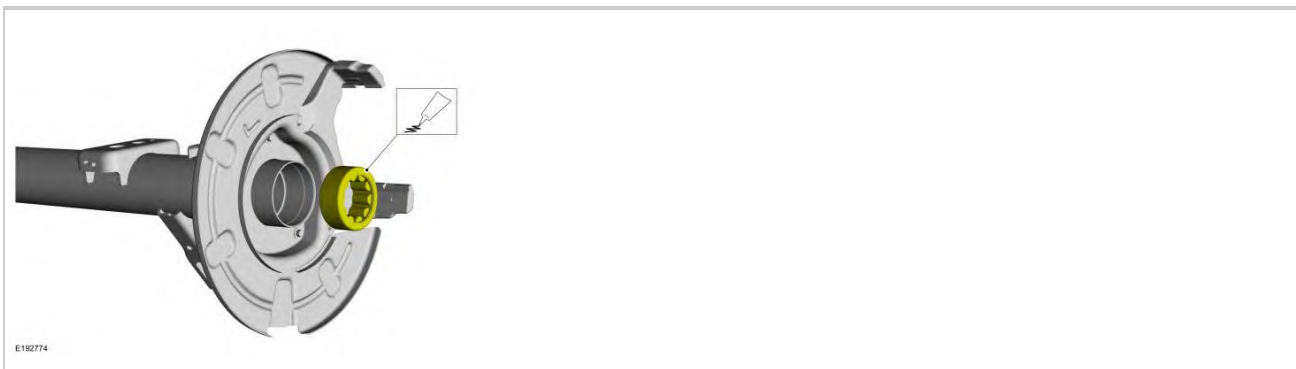

2.