


Using the special tools, install the new rear wheel bearing. Use Special Service Tool: 205-153 (T80T-4000-W) Handle., 205-194 (T83T-1225-B) Installer, Axle Bearing.

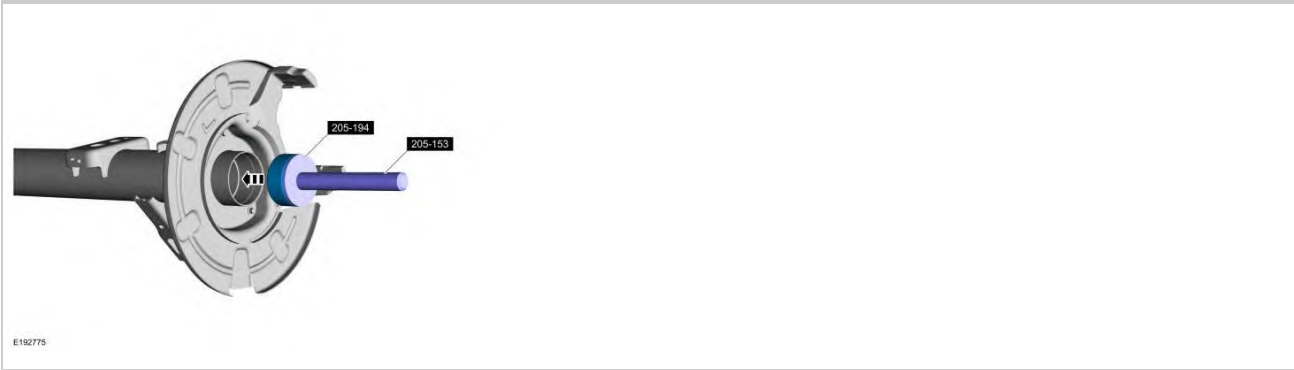

3.

1.


Lubricate the axle shaft seal lip.

Material

: Motorcraft ® SAE 75W-85 Premium Synthetic Hypoid Gear Lubricant / XY-75W85-QL (WSS-M2C942-A)

2.

Using the special tools install the new axle shaft seal. Use Special Service Tool: 205-153 (T80T-4000-W) Handle., 205-381 (T97T-1177-A) Installer, Rear Axle Oil Seal.

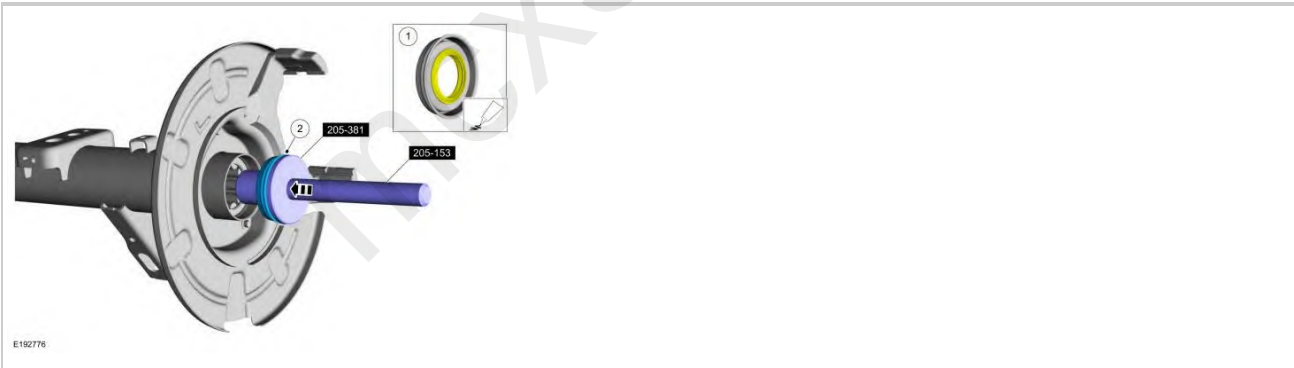

4.

Install the axle shaft. Refer to: Axle Shaft .

DISASSEMBLY AND ASSEMBLY > DIFFERENTIAL CARRIER

Special Tool(s) / General Equipment