


REMOVAL AND INSTALLATION > DRIVE PINION SEAL > INSTALLATION

1.

Lubricate the new drive pinion seal lip with grease.


Material

: Premium Long-Life Grease / XG-1-E1 (ESA-M1C75-B)

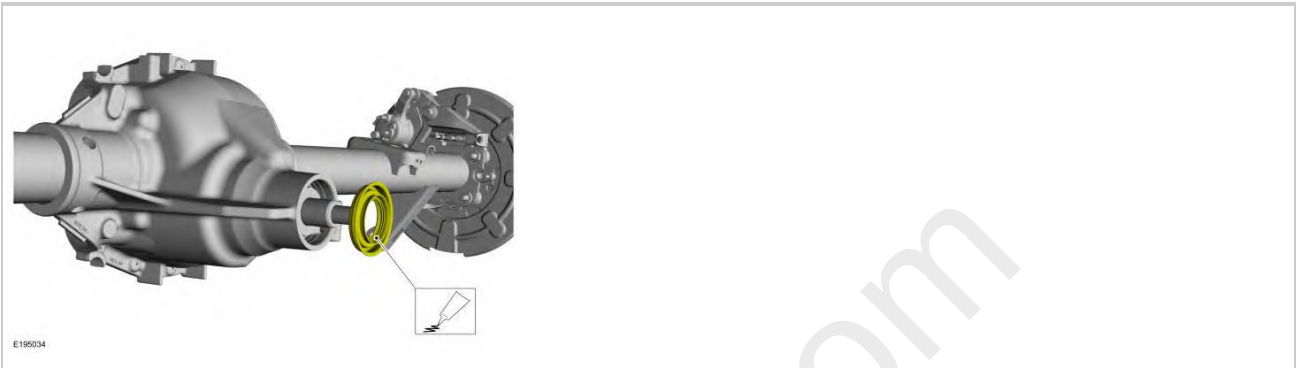

2.

Using the special tool, install the drive pinion seal. Use Special Service Tool: 205-208 (T83T-4676-A) Installer, Drive Pinion Oil Seal.

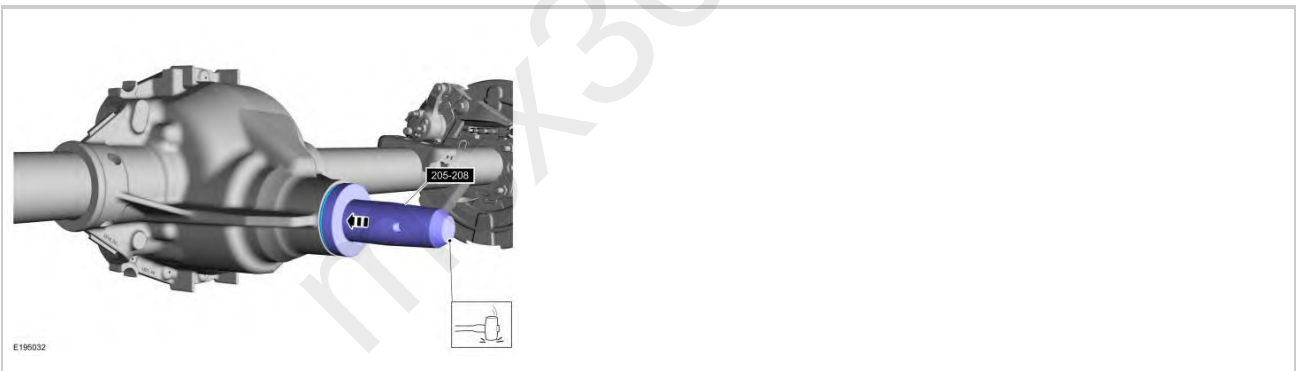

3.

Install the drive pinion flange. Refer to: Drive Pinion Flange .

REMOVAL AND INSTALLATION > REAR WHEEL BEARING

Special Tool(s) / General Equipment