


2.

Remove the bolts and the battery tray.

Torque

: 16 lb.ft (22 Nm)

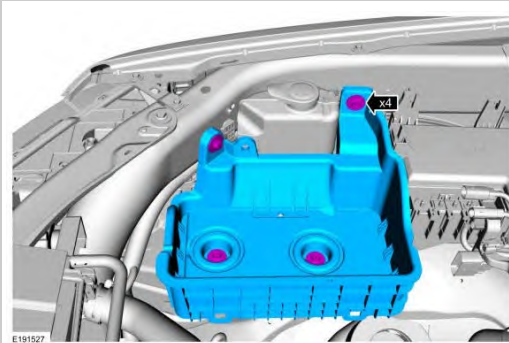

REMOVAL AND INSTALLATION > BATTERY TRAY > INSTALLATION

1.

To install, reverse the removal procedure.


REMOVAL AND INSTALLATION > GENERATOR CURRENT SENSOR > REMOVAL

1.

Disconnect the battery cable from the negative battery post. Refer to: Battery Disconnect and Connect .

2.

Remove the BJB cover.

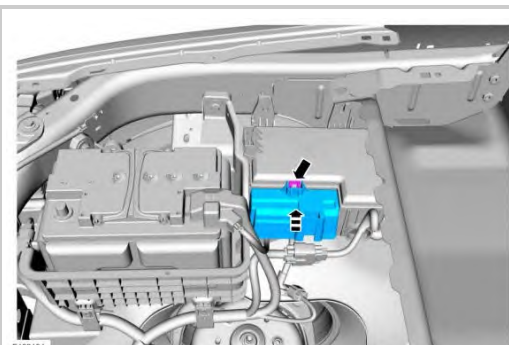

3.