

DESCRIPTION AND OPERATION > INSTRUMENT PANEL CLUSTER (IPC) -
OVERVIEW > OVERVIEW

The IPC uses gauges, warning and informational indicators, RTT indicators, warning messages and chimes to alert the driver of vehicle conditions and system operation. The message center provides menu selections to configure various vehicle features. For a complete list and description of the features the message center controls, refer to the Owner's Literature.

The IPC provides a single display screen that contains the message center, RTT indication and virtual gauge displays.

Informational indicators inform the driver of conditions that exist in the vehicle. Warning indicators provide information to the driver of conditions that could potentially cause personal injury or alter vehicle performance.

RTT indicators illuminate in the message center and replace traditional informational or warning indicators, using the same iconic representation. The message center uses a rotating RTT display area that can display multiple indicators, dedicated RTT displays and fixed locations for other RTT indicators and displays.

Base IPC



Base IPC

Item	Description
1	TPMS indicator
2	MIL
3	Safety belt warning indicator
4	Tachometer
5	Airbag warning indicator
6	Stability-traction control indicator (sliding car icon)
7	Charging system warning indicator

8	Oil pressure gauge
9	Low oil pressure warning indicator
10	Engine temperature gauge
11	Odometer display area
12	Cruise control RTT
13	Trip computer display area (may also use the cruise control display area as needed)
14	Fuel gauge
15	Outside air temperature display
16	Cruise control and set speed display area (may also use the trip computer and odometer display areas as needed)
17	Transmission temperature gauge
18	Speedometer
19	Tow haul indicator
20	Powertrain malfunction (wrench) indicator
21	Sport mode indicator
22	High beam indicator
23	ABS indicator
24	RH turn indicator
25	Front fog lamp indicator
26	PRNDL display
27	Low fuel indicator
28	4x4 low indicator
29	4x4 high indicator
30	Brake warning indicator
31	ELD indicator
32	LH turn indicator
33	Auto stop/start indicator
34	Lights on indicator
35	Electronic park brake indicator
36	Hill descent control indicator
37	Engine over-temperature warning indicator

38	Stability-traction control disabled indicator (sliding car OFF icon)
39	Door ajar warning indicator

Mid-Level IPC



Mid-Level IPC

Item	Description
1	TPMS indicator
2	MIL
3	Safety belt warning indicator
4	Tachometer
5	Airbag warning indicator
6	Stability-traction control indicator (sliding car icon)
7	Oil pressure gauge
8	Main menu navigation icon
9	Main menu display area
10	Engine temperature gauge
11	Sub-menu display area
12	Fuel gauge
13	Transmission temperature gauge
14	Compass
15	Manual shift mode, progressive range select and SelectShift® display
16	Cruise control set speed RTT
17	Speedometer
18	High beam indicator
19	ABS indicator

20	RH turn indicator
21	Front fog lamp indicator
22	Cruise control RTT
23	4WD (2H, 4H, 4L, 4H and 4A) RTT
24	Auto stop/start RTT
25	ELD RTT
26	PRNDL display
27	Rotating RTT display area Blind Spot Information System (BLIS ®) disabled Charging system Door ajar warning Engine over-temperature warning Hill descent control Low fuel Low engine oil pressure warning Powertrain malfunction (wrench)
28	Tow haul and sport mode RTT
29	Odometer
30	Brake warning indicator
31	LH turn indicator
32	Lights on indicator
33	Electronic park brake indicator
34	Stability-traction control disabled indicator (sliding car OFF icon)

High-Level IPC



High-Level IPC

Item	Description
1	Tachometer

2	Progressive range select display
3	Manual mode display
4	LH turn indicator
5	Low engine oil pressure warning RTT
6	Virtual engine oil pressure gauge
7	Auto stop/start RTT
8	Stability-traction control RTT (sliding car icon)
9	Virtual engine temperature gauge
10	Engine over-temperature warning RTT
11	Cruise control and set speed display (non-ACC) ACC and lane keeping aid display
12	DTE display
13	Low fuel RTT
14	Virtual fuel gauge
15	Rotating RTT display area Charging system Door ajar warning Blind Spot Information System (BLIS ®) disabled Powertrain malfunction (wrench)
16	Configurable virtual gauge Transmission temperature gauge Turbo boost gauge
17	Main menu tabbed navigation
18	RH turn indicator
19	Speedometer
20	Brake warning indicator
21	High beam indicator
22	ABS indicator
23	Front fog lamp RTT
24	Compass
25	ELD RTT
26	Lights on RTT
27	Auto high beam RTT
28	Electronic park brake RTT
29	ACC set speed