

30	PRNDL display area
31	ACC RTT
32	TPMS RTT
33	Stability-traction control disabled RTT (sliding car OFF icon)
34	Odometer
35	4WD (2H, 4L, 4H and 4A) RTT
36	Tow haul and sport mode RTT
37	MIL
38	Airbag warning indicator
39	Safety belt warning indicator

Network Messaged Inputs

Module messaging has increased over time and is the standard for sending and receiving information required to operate the IPC. The majority of the inputs required to operate the IPC are received over the CAN.

Hardwired Inputs

The IPC requires hardwired inputs from components that are not on the CAN. These components are required for specific IPC functions.

The hardwired inputs are provided by the following components:

- CAN
- Fuel pump assembly
- Park detect switch (part of the floor shifter assembly)

DESCRIPTION AND OPERATION > INSTRUMENT PANEL CLUSTER (IPC) - SYSTEM OPERATION AND COMPONENT DESCRIPTION

System Operation

DESCRIPTION AND OPERATION > INSTRUMENT PANEL CLUSTER (IPC) - SYSTEM OPERATION AND COMPONENT DESCRIPTION > NETWORK MESSAGE CHART - GAUGES

Module Network Input Messages - IPC

Broadcast Message	Originating Module	Message Purpose
-------------------	--------------------	-----------------