

WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST P : THE AIRBAG WARNING INDICATOR IS NEVER OR ALWAYS ON > PINPOINT TEST P : THE AIRBAG WARNING INDICATOR IS NEVER OR ALWAYS ON

P1 PERFORM THE IPC (INSTRUMENT PANEL CLUSTER) SELF-TEST

Ignition ON.

Using a diagnostic scan tool, perform the IPC self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to DTC Chart: IPC .
No	GO to P2

P2 CHECK THE GWM (GATEWAY MODULE A) DIAGNOSTIC TROUBLE CODES (DTCS)

Using a diagnostic scan tool, check the GWM Continuous Memory Diagnostic Trouble Codes (CMDTCs).

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to: Communications Network .
No	GO to P3

P3 PERFORM THE IPC (INSTRUMENT PANEL CLUSTER) INDICATOR LAMP CONTROL ACTIVE COMMAND USING A SCAN TOOL

Using a diagnostic scan tool, view the IPC Parameter Identifications (PIDs).

Select the IPC airbag warning indicator (AIRBAG_LMP) PID.

Command the airbag warning indicator on then off while observing the airbag warning indicator.

Does the airbag warning indicator turn on when commanded on and turn off when commanded off?

Yes	DIAGNOSE the SRS. REFER to: Airbag Supplemental Restraint System (SRS) .
No	

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST Q : THE AUTO