

- Communication concern
- BCM concern
- GWM concern
- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST Y : THE HIGH BEAM INDICATOR IS NEVER OR ALWAYS ON > PINPOINT TEST Y : THE HIGH BEAM INDICATOR IS NEVER OR ALWAYS ON

Y1 CHECK THE HIGH BEAMS LIGHTS

Turn on the high beams.

Do the high beams operate correctly?

Yes	GO to Y2
No	REFER to: Headlamps .

Y2 PERFORM THE IPC (INSTRUMENT PANEL CLUSTER) SELF-TEST

Ignition ON.

Using a diagnostic scan tool, perform the IPC self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to DTC Chart: IPC .
No	GO to Y3

Y3 CHECK THE GWM (GATEWAY MODULE A) DIAGNOSTIC TROUBLE CODES (DTCS)

Using a diagnostic scan tool, check the GWM Continuous Memory Diagnostic Trouble Codes (CMDTCs).

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to: Communications Network .
No	GO to Y4

Y4 CHECK THE HIGH BEAM INDICATOR OPERATION USING A SCAN TOOL