

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AS : THE BLIND SPOT INFORMATION SYSTEM (BLIS ®) OFF RTT (RECONFIGURABLE TELLTALE) IS NEVER OR ALWAYS ON

Normal Operation and Fault Conditions

See Blind Spot Monitoring System (BLIS ®) Off RTT. REFER to: Message Center - System Operation and Component Description .

If the cross traffic alert left or cross traffic right message is missing or invalid for less than 5 seconds, the IPC defaults the Blind Spot Information System (BLIS ®) off RTT to the last state (on or off), based upon the last message received.

If the cross traffic alert left or cross traffic right message is missing or invalid for 5 seconds or longer, the IPC defaults the Blind Spot Information System (BLIS ®) off RTT off.

Possible Sources

- Communication concern
- GWM concern
- SODL concern
- SODR concern
- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AS : THE BLIND SPOT INFORMATION SYSTEM (BLIS ®) OFF RTT (RECONFIGURABLE TELLTALE) IS NEVER OR ALWAYS ON > PINPOINT TEST AS : THE BLIND SPOT INFORMATION SYSTEM (BLIS ®) OFF RTT (RECONFIGURABLE TELLTALE) IS NEVER OR ALWAYS ON

AS1 CHECK THE MESSAGE CENTER OPERATION

Ignition ON.

Close all doors and the hood.

Clear all message center warnings by pressing the OK button for each warning present.

Monitor the door ajar RTT.

Open the driver door.

Clear the message center popup warning.

Monitor the door ajar RTT.