

Normal Operation and Fault Conditions

See Cruise Control RTT. REFER to: Message Center - System Operation and Component Description .

If the cruise control status, cruise control override or cruise control set speed message is missing or deemed invalid by the IPC for less than 5 seconds, the IPC defaults the cruise control indicator to the last indication state (on or off), based upon the last message received.

If the cruise control status, cruise control override or cruise control set speed message is missing or if the data is deemed invalid by the IPC for 5 seconds or longer, the IPC defaults the cruise control indicator off.

Possible Sources

- Communication concern
- Cruise control concern
- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AT : THE CRUISE CONTROL RTT (RECONFIGURABLE TELLTALE) IS NEVER ON > PINPOINT TEST AT : THE CRUISE CONTROL RTT (RECONFIGURABLE TELLTALE) IS NEVER ON

AT1 CHECK THE MESSAGE CENTER OPERATION

Ignition ON.

Close all doors and the hood.

Clear all message center warnings by pressing the OK button for each warning present.

Monitor the door ajar RTT.

Open the driver door.

Clear the message center popup warning.

Monitor the door ajar RTT.

Is the door ajar RTT off with the door closed, and on with the door open?

Yes	GO to AT2
No	GO to Pinpoint Test A

AT2 PERFORM THE IPC (INSTRUMENT PANEL CLUSTER) SELF-TEST

Using a diagnostic scan tool, perform the IPC self-test.