

FILL INLET MESSAGE IS ALWAYS DISPLAYED > PINPOINT TEST AV : THE CHECK FUEL FILL INLET MESSAGE IS ALWAYS DISPLAYED

AV1 CHECK THE MESSAGE CENTER OPERATION

Ignition ON.

Close all doors and the hood.

Clear all message center warnings by pressing the OK button for each warning present.

Monitor the door ajar RTT.

Open the driver door.

Clear the message center popup warning.

Monitor the door ajar RTT.

Is the door ajar RTT off with the door closed, and on with the door open?

Yes	GO to AV2
No	GO to Pinpoint Test A

AV2 PERFORM THE IPC (INSTRUMENT PANEL CLUSTER) SELF-TEST

Using a diagnostic scan tool, perform the IPC self-test.

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to DTC Chart: IPC .
No	GO to AV3

AV3 CHECK THE GWM (GATEWAY MODULE A) DIAGNOSTIC TROUBLE CODES (DTCS)

Using a diagnostic scan tool, check the GWM Continuous Memory Diagnostic Trouble Codes (CMDTCs).

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to: Communications Network .
No	DIAGNOSE all PCM Diagnostic Trouble Codes (DTCs). Refer to the appropriate article for the procedure.