

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AW : THE ACTIVE PARK ASSIST-PARKING AID CHIME IS INOPERATIVE

Normal Operation and Fault Conditions

See Active Park Assist Chime or Parking Aid Chime. REFER to: Warning Chimes - System Operation and Component Description .

Possible Sources

- Parking aid system concern
- Communication concern
- GWM concern
- IPC
- PAM concern

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST AW : THE ACTIVE PARK ASSIST-PARKING AID CHIME IS INOPERATIVE > PINPOINT TEST AW : THE ACTIVE PARK ASSIST-PARKING AID CHIME IS INOPERATIVE

AW1 CHECK THE SAFETY BELT WARNING CHIME OPERATION

Ignition OFF.

Ignition ON.

Unbuckle the driver safety belt.

Monitor the safety belt warning chime when the ignition is transitioned from OFF to RUN for 6 seconds.

Does the safety belt warning chime operate for approximately 6 seconds?

Yes	GO to AW2
No	

AW2 VERIFY THE CHIMES FUNCTION THROUGH THE AUDIO SPEAKERS

Ignition OFF.

Ignition ON.

Monitor the location of the safety belt warning chime (front/rear audio speakers or IPC)