

No	GO to BB4
-----------	-----------

BB4 CHECK THE GWM (GATEWAY MODULE A) DIAGNOSTIC TROUBLE CODES (DTCS)

Using a diagnostic scan tool, check the GWM Continuous Memory Diagnostic Trouble Codes (CMDTCs).

Are any Diagnostic Trouble Codes (DTCs) recorded?

Yes	REFER to: Communications Network .
------------	------------------------------------

No	DIAGNOSE the collision avoidance system. REFER to: Collision Warning and Collision Avoidance System .
-----------	---

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST BC : THE HEADLAMPS ON WARNING CHIME IS INOPERATIVE

Normal Operation and Fault Conditions

See Headlamps On Warning Chime. REFER to: Warning Chimes - System Operation and Component Description .

Possible Sources

- GWM concern
- BCM concern
- IPC

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > PINPOINT TESTS > PINPOINT TEST BC : THE HEADLAMPS ON WARNING CHIME IS INOPERATIVE > PINPOINT TEST BC : THE HEADLAMPS ON WARNING CHIME IS INOPERATIVE

BC1 CHECK THE SAFETY BELT WARNING CHIME OPERATION

Ignition OFF.

Ignition ON.

Unbuckle the driver safety belt.

Monitor the safety belt warning chime when the ignition is transitioned from OFF to RUN for 6 seconds.