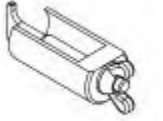


Service Manual: INSTRUMENT PANEL AND CONSOLE

REMOVAL AND INSTALLATION > AUXILIARY POWER POINT**Special Tool(s) / General Equipment**

 E188627	501-194 Remover, Power Point TKIT-2014D-FL_ROW
--	---

REMOVAL AND INSTALLATION > AUXILIARY POWER POINT > REMOVAL

1.


Open the power point cover.



2.

Position the power point extractor so that it engages in the adjacent slots in the power point socket.

Use Special Service Tool: 501-194 Remover, Power Point.

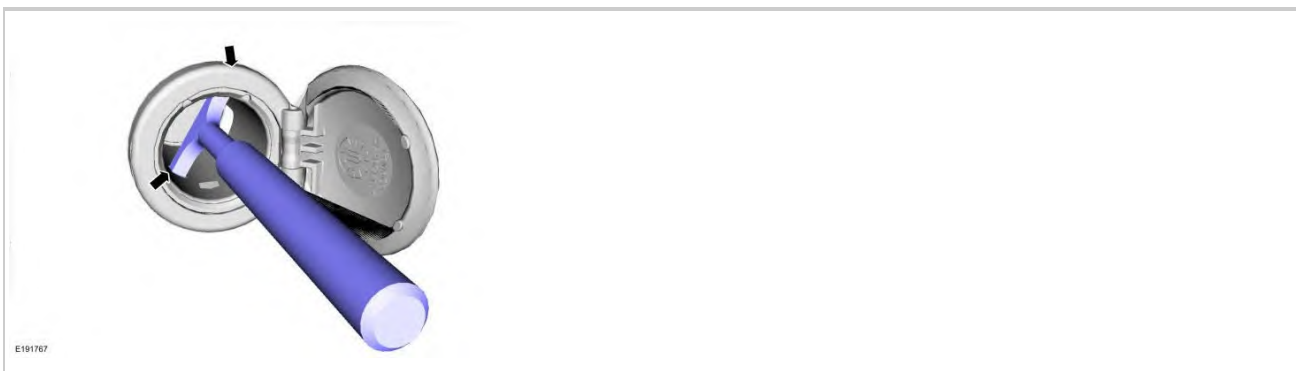

3.


1.

Install the receiver cup.

2.

Install and tighten the wing nut.

Use Special Service Tool: 501-194 Remover, Power Point.

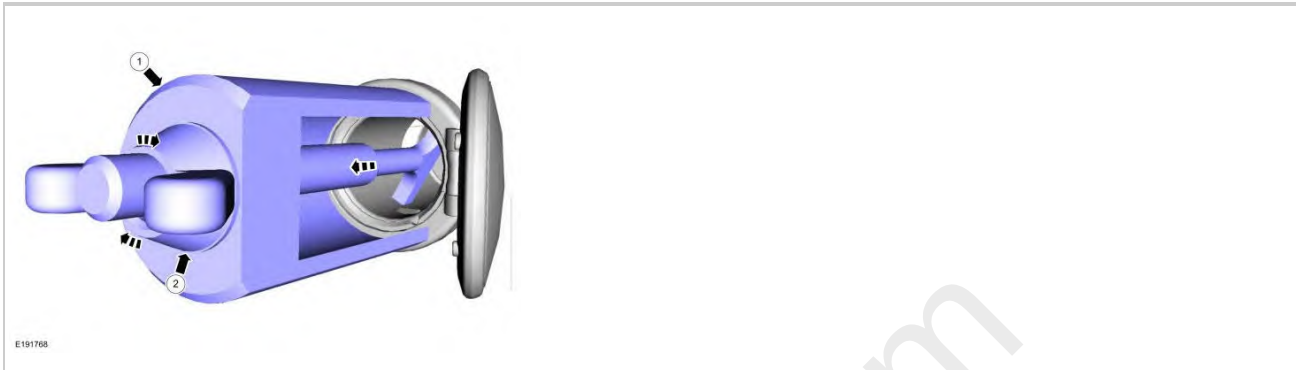

4.

Tighten the wing nut to pull the power point socket out of the retainer.

Use Special Service Tool: 501-194 Remover, Power Point.



5.

Disconnect the electrical connector.

