


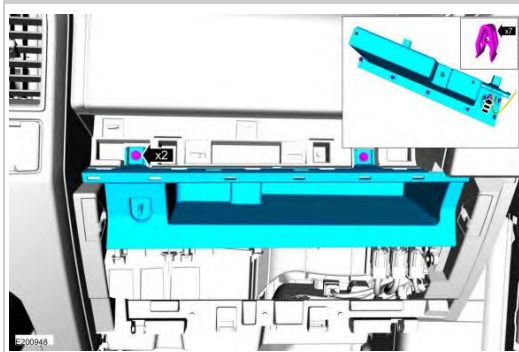

REMOVAL AND INSTALLATION > GLOVE COMPARTMENT > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > INSTRUMENT PANEL

Special Tool(s) / General Equipment

Interior Trim Remover

REMOVAL AND INSTALLATION > INSTRUMENT PANEL > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

All vehicles

1.

Depower the SRS. Refer to: Supplemental Restraint System (SRS) Depowering .

2.

Remove both A-pillar trim panels. Refer to: A-Pillar Trim Panel .

3.

Release the clips and remove the LH instrument panel finish panel.

Position aside the weather strip.

Use the General Equipment: Interior Trim Remover