

Reconnect the BCM and related in-line connectors and all previously disconnected illumination system connectors. Make sure all connectors seat and latch correctly.

Operate the system to determine if the concern is still present.

**Is the concern still present?**

|            |                                                                                                                                                                                                                              |
|------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Yes</b> | CHECK OASIS for any applicable Technical Service Bulletins (TSBs). If a TSB exists for this concern, DISCONTINUE this test and FOLLOW the TSB instructions. If no Technical Service Bulletins (TSBs) address this concern, . |
| <b>No</b>  | The system is operating correctly at this time. The concern may have been caused by module connections. ADDRESS the root cause of any connector or pin issues.                                                               |

**DIAGNOSIS AND TESTING > INSTRUMENT PANEL AND INTERIOR SWITCHES  
ILLUMINATION > PINPOINT TEST > PINPOINT TEST E : THE LH (LEFT-HAND) FRONT  
DOOR LOCK/MEMORY SET SWITCH ILLUMINATION IS INOPERATIVE OR ALWAYS  
ON**

Refer to Power Windows for schematic and connector information.

**Normal Operation and Fault Conditions**

Based on messages received from the BCM, the DDM supplies voltage to illuminate the LH front door lock/memory set switch.

| DTC      | Description                                  | Fault Trigger Conditions                                                                                                                   |
|----------|----------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| U2010:00 | Switch Illumination: No Sub Type Information | This DTC sets on-demand and in continuous memory when the DDM detects a short to ground or open on the switch illumination output circuit. |

**Possible Sources**

- Communication network concern
- Wiring, terminals or connectors
- LH front door lock switch
- DDM

**DIAGNOSIS AND TESTING > INSTRUMENT PANEL AND INTERIOR SWITCHES  
ILLUMINATION > PINPOINT TEST > PINPOINT TEST E : THE LH (LEFT-HAND) FRONT  
DOOR LOCK/MEMORY SET SWITCH ILLUMINATION IS INOPERATIVE OR ALWAYS**