

corrosion (install new connector or terminals - clean module pins)

damaged or bent pins - install new terminals/pins

pushed-out pins - install new pins as necessary

Reconnect the DDM and related in-line connectors and all previously disconnected illumination system connectors. Make sure all connectors seat and latch correctly.

Operate the system to determine if the concern is still present.

#### Is the concern still present?

|     |                                                                                                                                                                                                                                                                                    |
|-----|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Yes | CHECK OASIS for any applicable Technical Service Bulletins (TSBs). If a TSB exists for this concern, DISCONTINUE this test and FOLLOW the TSB instructions. If no Technical Service Bulletins (TSBs) address this concern, INSTALL a new DDM. REFER to: Driver Door Module (DDM) . |
| No  | The system is operating correctly at this time. The concern may have been caused by module connections. ADDRESS the root cause of any connector or pin issues.                                                                                                                     |

## DIAGNOSIS AND TESTING > INSTRUMENT PANEL AND INTERIOR SWITCHES ILLUMINATION > PINPOINT TEST > PINPOINT TEST F : THE RH (RIGHT-HAND) FRONT DOOR LOCK AND/OR WINDOW CONTROL SWITCH ILLUMINATION IS INOPERATIVE OR ALWAYS ON

Refer to Power Windows for schematic and connector information.

### Normal Operation and Fault Conditions

Based on messages received from the BCM, the PDM supplies voltage to the illuminate the RH front door lock switch and window control switch. The RH door lock and window control switch illumination shares a common power circuit.

| DTC      | Description                                  | Fault trigger conditions                                                                                                                   |
|----------|----------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| U2010:00 | Switch Illumination: No Sub Type Information | This DTC sets on-demand and in continuous memory when the PDM detects a short to ground or open on the switch illumination output circuit. |

### Possible Sources

- Communication network concern
- Wiring, terminals or connectors
- RH door lock switch
- RH window control switch