

An individual or both exterior mirror parking lamps and/or the high-mounted stoplamp parking lamp is inoperative	Refer to the Pinpoint Test	GO to PINPOINT TEST L : AN INDIVIDUAL OR BOTH EXTERIOR MIRROR PARKING LAMPS AND/OR THE HIGH-MOUNTED STOPLAMP PARKING LAMP IS INOPERATIVE
--	----------------------------	--

DIAGNOSIS AND TESTING > PARKING, REAR AND LICENSE PLATE LAMPS > PINPOINT TESTS > PINPOINT TEST A : ALL THE PARKING LAMPS ARE ALWAYS ON

Refer to Parking, Rear and License Lamps for schematic and connector information.

Normal Operation and Fault Conditions

REFER to: Exterior Lighting - System Operation and Component Description .

DTC Fault Trigger Conditions

DTC	Description	Fault Trigger Conditions
B1447:11	Parklamp On Switch Input: Circuit Short to Ground	An on-demand DTC that sets when the BCM detects a short to ground on the parklamps on input circuit.

Possible Sources

- Wiring, terminals or connectors
- Headlamp switch
- BCM

Visual Inspection and Diagnostic Pre-checks

- Inspect the headlamp switch for damage.

DIAGNOSIS AND TESTING > PARKING, REAR AND LICENSE PLATE LAMPS > PINPOINT TESTS > PINPOINT TEST A : ALL THE PARKING LAMPS ARE ALWAYS ON > PINPOINT TEST A : ALL THE PARKING LAMPS ARE ALWAYS ON

A1 CHECK LOW BEAMS OPERATION

Ignition ON.

Place the headlamp switch in the OFF position.

Observe the operation of the low beam headlamps.