

DIAGNOSIS AND TESTING > PARKING, REAR AND LICENSE PLATE LAMPS > PINPOINT TESTS > PINPOINT TEST D : AN INDIVIDUAL FRONT PARKING LAMP IS INOPERATIVE - HALOGEN HEADLAMPS > PINPOINT TEST D : AN INDIVIDUAL FRONT PARKING LAMP IS INOPERATIVE - HALOGEN HEADLAMPS

D1 CHECK FOR VOLTAGE TO THE FRONT SIDE MARKER OR PARKING LAMP

Place the headlamp switch in the OFF position.

Ignition OFF.

Disconnect: Inoperative LH Front Park/Turn Lamp C1023 or RH Front Park/Turn Lamp C1043 .

Ignition ON.

Place the headlamp switch in the PARKING LAMPS position.

Measure:

LH Front Park Lamp

Positive Lead	Measurement / Action	Negative Lead
C1023-2		Ground

RH Front Park Lamp

Positive Lead	Measurement / Action	Negative Lead
C1043-2		Ground

Is the voltage greater than 11 volts?

Yes	GO to D2
------------	----------

No	REPAIR the front parking lamp voltage supply circuit for an open.
-----------	---

D2 CHECK THE FRONT PARKING LAMP GROUND CIRCUIT FOR AN OPEN

Measure:

LH Front Park Lamp

Positive Lead	Measurement / Action	Negative Lead
C1023-2		C1023-1

RH Front Park Lamp