

	Module	
Both spot lamps are inoperative	Refer to the Pinpoint Test	GO to PINPOINT TEST A : BOTH SPOT LAMPS ARE INOPERATIVE
An individual spot lamp is inoperative	Refer to the Pinpoint Test	GO to PINPOINT TEST B : AN INDIVIDUAL SPOT LAMP IS INOPERATIVE
One or both spot lamps are on continuously	Refer to the Pinpoint Test	GO to PINPOINT TEST C : ONE OR BOTH SPOT LAMPS ARE ON CONTINUOUSLY
A spot lamp switch indicator is inoperative	Refer to the Pinpoint Test	GO to PINPOINT TEST D : A SPOT LAMP SWITCH INDICATOR IS INOPERATIVE

DIAGNOSIS AND TESTING > SPOT LAMPS > PINPOINT TESTS > PINPOINT TEST A : BOTH SPOT LAMPS ARE INOPERATIVE

Refer to Power Mirrors for schematic and connector information.

Normal Operation and Fault Conditions

REFER to: Exterior Lighting - System Operation and Component Description .

DTC Fault Trigger Conditions

DTC	Description	Fault Trigger Conditions
B14AB:11	Spotlight Mirror Output: Circuit Short To Ground	A continuous memory and on-demand DTC that sets when the BCM detects a short to ground from the spot lamp output circuit.
U1000:00	Solid State Driver Protection Active -Driver Disabled: No Sub Type Information	This DTC sets when the BCM has temporarily shut down the output driver. The module has temporarily disabled an output because an excessive current draw exists (such as a short to ground). The BCM cannot enable the output until the cause of the short is corrected, the Diagnostic Trouble Codes (DTCs) have been cleared and a successful self-test is run.
U3000:49	Control Module: Internal Electronic Failure	This DTC sets when the BCM has permanently shut down the output driver. The module has permanently disabled an output