

Hot in Start or Run

BODY CONTROL MODULE (BCM) 11-4

BATTERY JUNCTION BOX (BJB) 11-1

Hot at all times

REAR WINDOW DEFROST RELAY

FRONT CONTROLS INTERFACE MODULE (FCIM) 54-1 55-1 131-7 132-8

DEF REQ

REAR WINDOW DEFROST GRID 151-20 151-23 151-26 151-27

EXTERIOR MIRROR LH 124-1 124-2

EXTERIOR MIRROR RH 124-3 124-4

MS CAN +

MS CAN -


MODULE COMMUNICATIONS NETWORK 14-8

Wiring Details:

- Power Source:** BATTERY JUNCTION BOX (BJB) 11-1
- Relays and Fuses:** REAR WINDOW DEFROST RELAY, F37 15A 13-26, F5 40A 13-11, F63 15A 13-11
- Wires:** CBP37, WH, CRD02, BN-BU, CBB80, YE-GN, CBB85, YE, CBB63, BN-YE, CBB05, YE, C3368B, C3368A, GD347, BK-VT, G302 10-17, GD233, BK, G300 10-11, GD238, BK-WH, G301 10-14
- Connectors:** C2280A, C211, C2402A, C510, C516, C521, C601, C602, C610, C622, C610, C610
- Grounds:** G302 10-17, G300 10-11, G301 10-14

HORN/CIGAR LIGHTER

Fig 1: Horn/Cigar Lighter System Wiring Diagrams (1 Of 4)

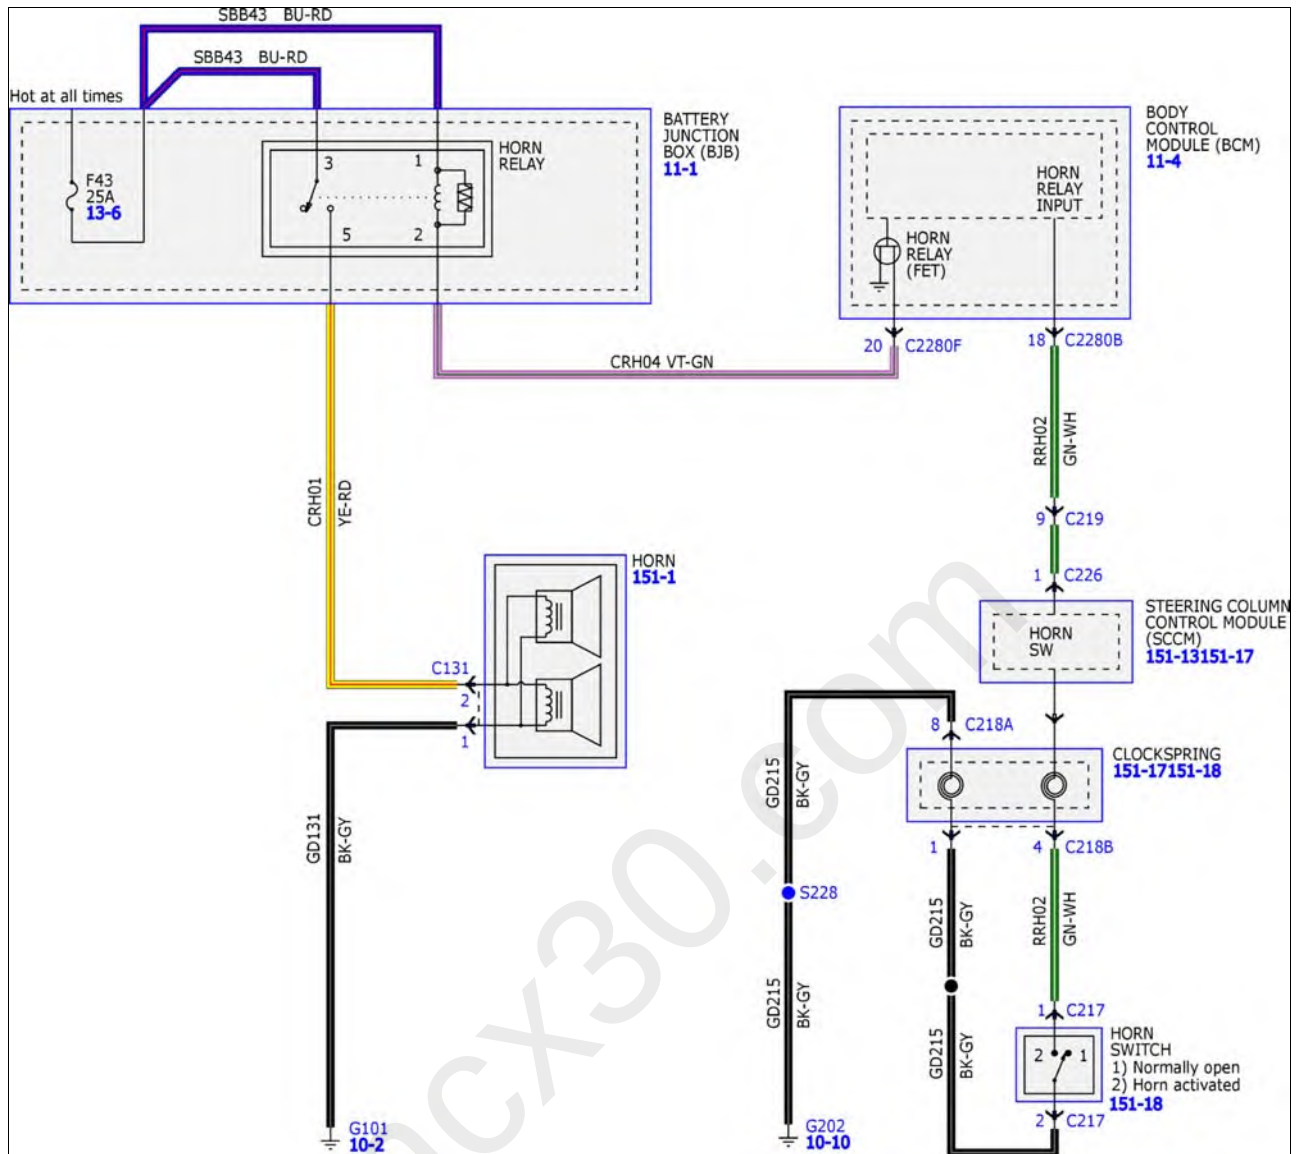


Courtesy of FORD MOTOR COMPANY

Courtesy of FORD MOTOR COMPANY

Fig 3: Horn/Cigar Lighter System Wiring Diagrams (3 Of 4)

110V POWER INVERTER

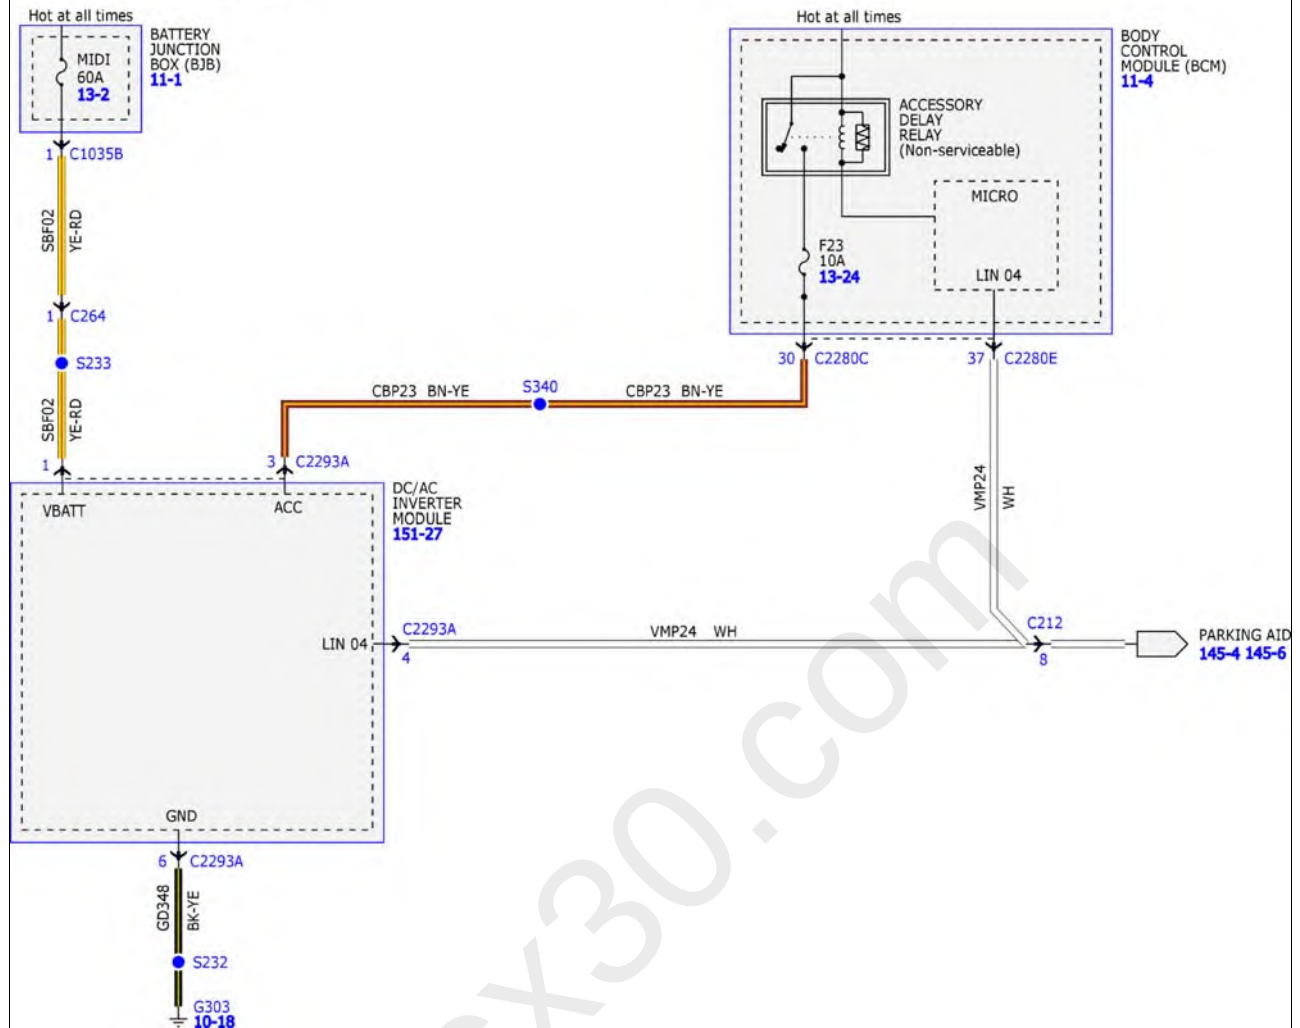

Courtesy of FORD MOTOR COMPANY