


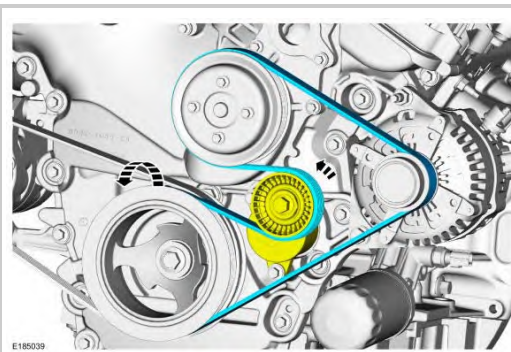


REMOVAL AND INSTALLATION > ACCESSORY DRIVE BELT > INSTALLATION

1.

To install, reverse the removal procedure.

2.

After installation, make sure the accessory drive belt is correctly seated on all pulleys.

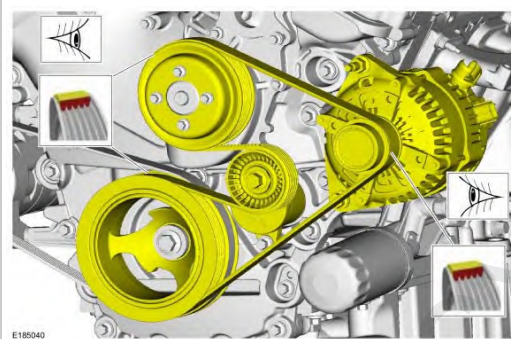

REMOVAL AND INSTALLATION > ACCESSORY DRIVE BELT TENSIONER > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the accessory drive belt. REFER to: Accessory Drive Belt .

2.

Remove the bolts and the accessory drive belt tensioner.

Torque

: 18 lb.ft (25 Nm)